


ASTORINO

Linear Track Operation Manual

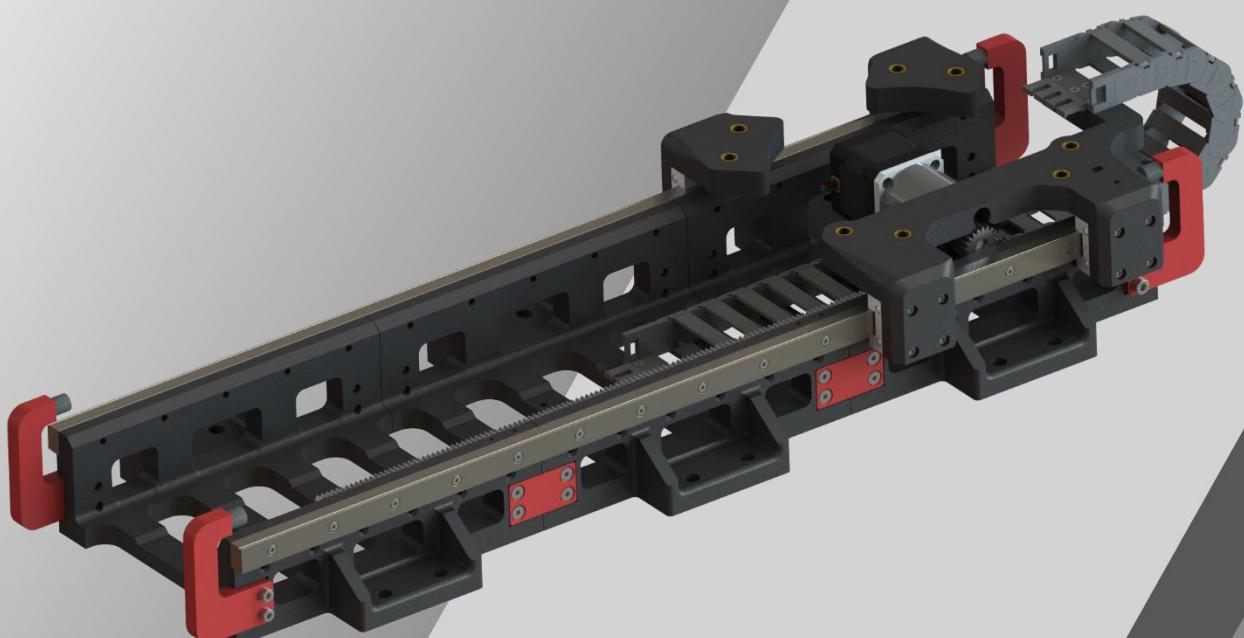

ASTORINO Linear Track Operation Manual

Introduction

This manual describes the linear track option for the "Kawasaki Robotics Astorino" educational robot.

ASTORINO is an educational robot that has been specially developed for training establishments and institutions. Pupils and students can use ASTORINO to learn the automation and robotization of industrial processes in practice.

If you have any further questions, please contact local Kawasaki Support.

ASTORINO Linear Track Operation Manual

1. The "astorino" software included with the ASTORINO is licensed for use with this robot only and may not be used, copied or distributed in any other environment.
2. Kawasaki shall not be liable for any accidents, damages, and/or problems caused by improper use of the ASTORINO robot.
3. Kawasaki reserves the right to change, revise, or update this manual without prior notice.
4. This manual may not be reprinted or copied in whole or in part without prior written permission from Kawasaki.
5. Keep this manual in a safe place and within easy reach so that it can be used at any time. If the manual is lost or seriously damaged, contact Kawasaki.

Copyright © 2025 by KAWASAKI Robotics GmbH.

All rights reserved.

Symbols

Items that require special attention in this manual are marked with the following symbols.

Ensure proper operation of the robot and prevent injury or property damage by following the safety instructions in the boxes with these symbols.

! **WARNING**

**Failure to observe the specified contents
could possibly result in injury or, in the
worst case, death.**

[ATTENTION]

Identifies precautions regarding robot specifications, handling, teaching, operation,

! **WARNING**

- 1. The accuracy and effectiveness of the diagrams, procedures and explanations in this manual cannot be confirmed with absolute certainty. Should any un-explained problems occur, contact Kawasaki Robotics GmbH at the above address.**
- 2. To ensure that all work is performed safely, read and understand this manual. In addition, refer to all applicable laws, regulations, and related materials, as well as the safety statements described in each chapter.**

Paraphrases

The following formatting rules are used in this manual:


- For a particular keystroke, the respective key is enclosed in angle brackets, e.g. <F1> or <Enter>.
- For the button of a dialog box or the toolbar, the button name is enclosed in square brackets, e.g. [Ok] or [Reset].
- Selectable fields are marked with a square box . If selected a check mark is shown inside the symbol .

ASTORINO Linear Track Operation Manual

1 Technical specifications

Characteristics	Astorino Linear Track	
Working environment	Temperature	0-40°C
	Humidity	35-80%
Travel distance	408 mm	
Max. speed	250 mm/s	
Repeatability	±0.1mm	
Size	730x220x105mm	
Cooperation	Yes	
Weight	4 kg	
Material	Aluminium, PET-G, Steel	
Colour	Red/Black	



2 Linear Track package contents

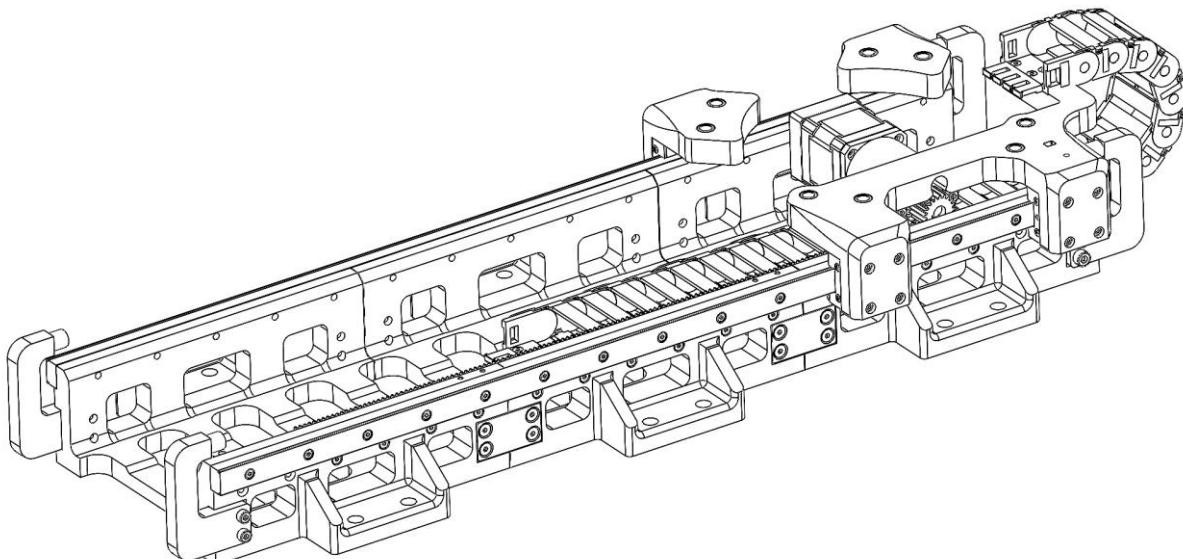

Linear track with installation cables

ASTORINO Linear Track Operation Manual

3 Dimensions

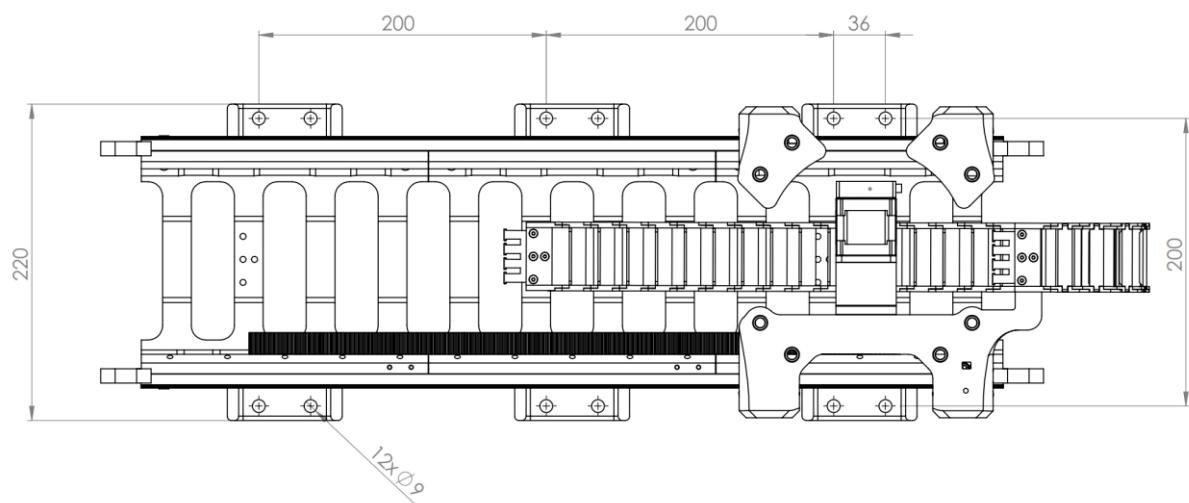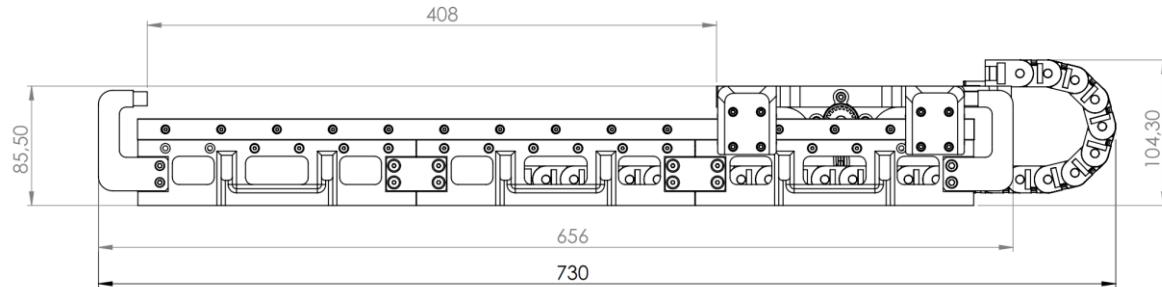


ASTORINO Linear Track Operation Manual

4 Installation

4.1 The tools you need

Allen wrench


2 mm

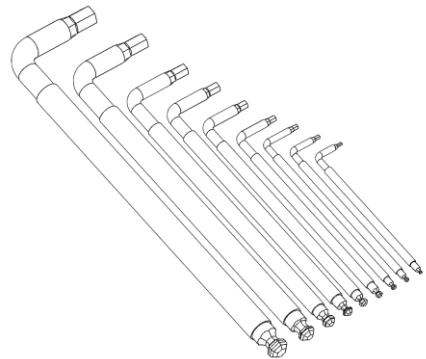

6 mm


Cross screwdriver

PH0

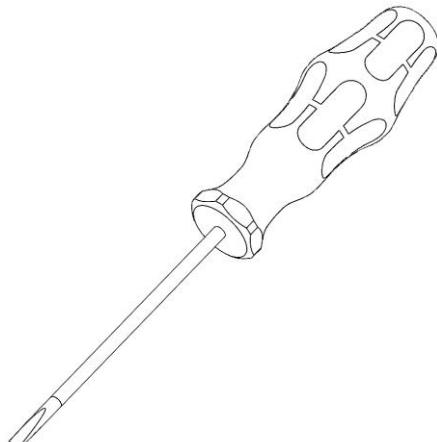

ASTORINO Linear Track Operation Manual

4.2 Preparing the robot

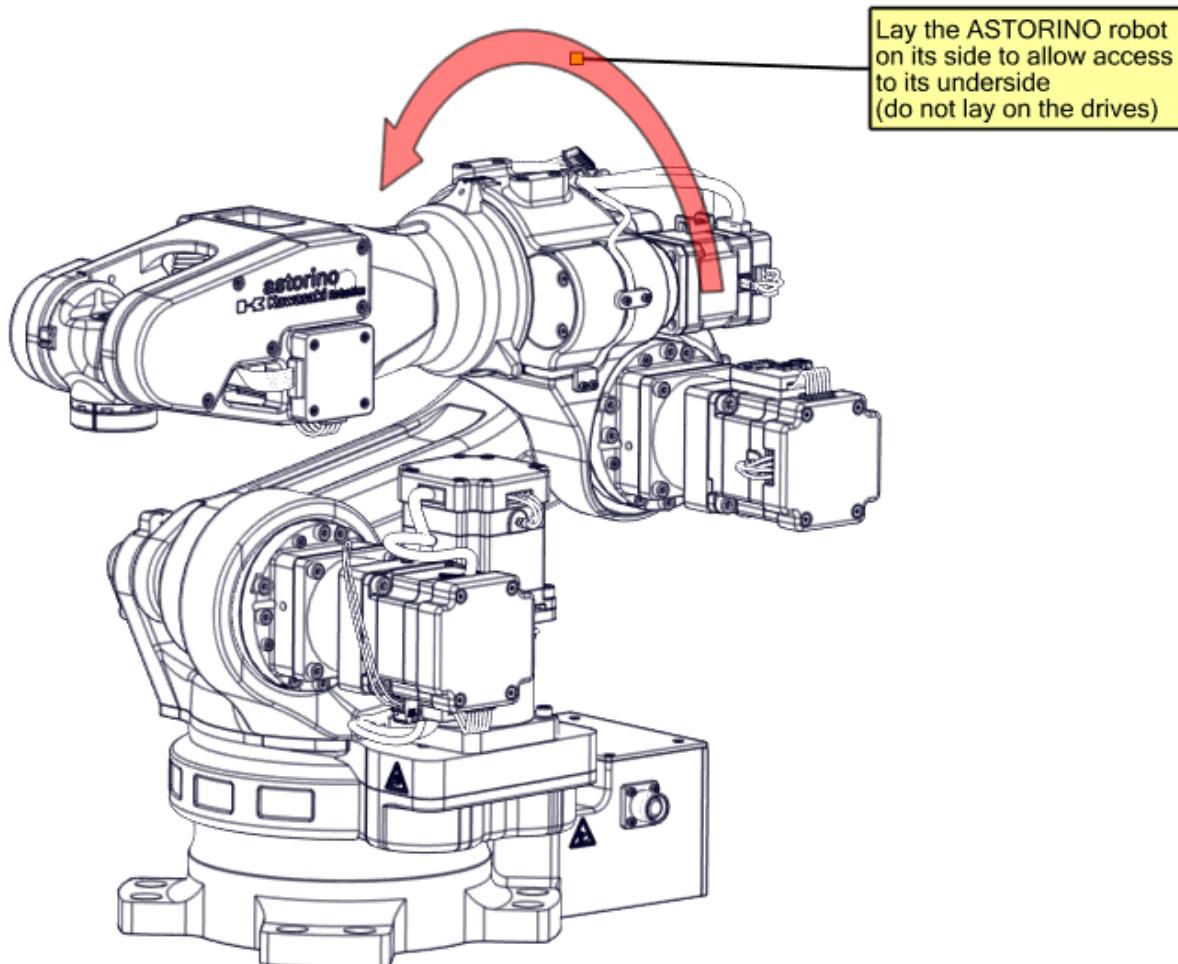


[ATTENTION]

Robots with serial number higher than 30 are delivered with prepared JT7 wires.

If there is an opening at the bottom of the robot in the bottom cover, and JT7 cables are available, the steps 4.3 to 4.7 can be skipped.


ASTORINO Linear Track Operation Manual

4.3 Bottom cover removal

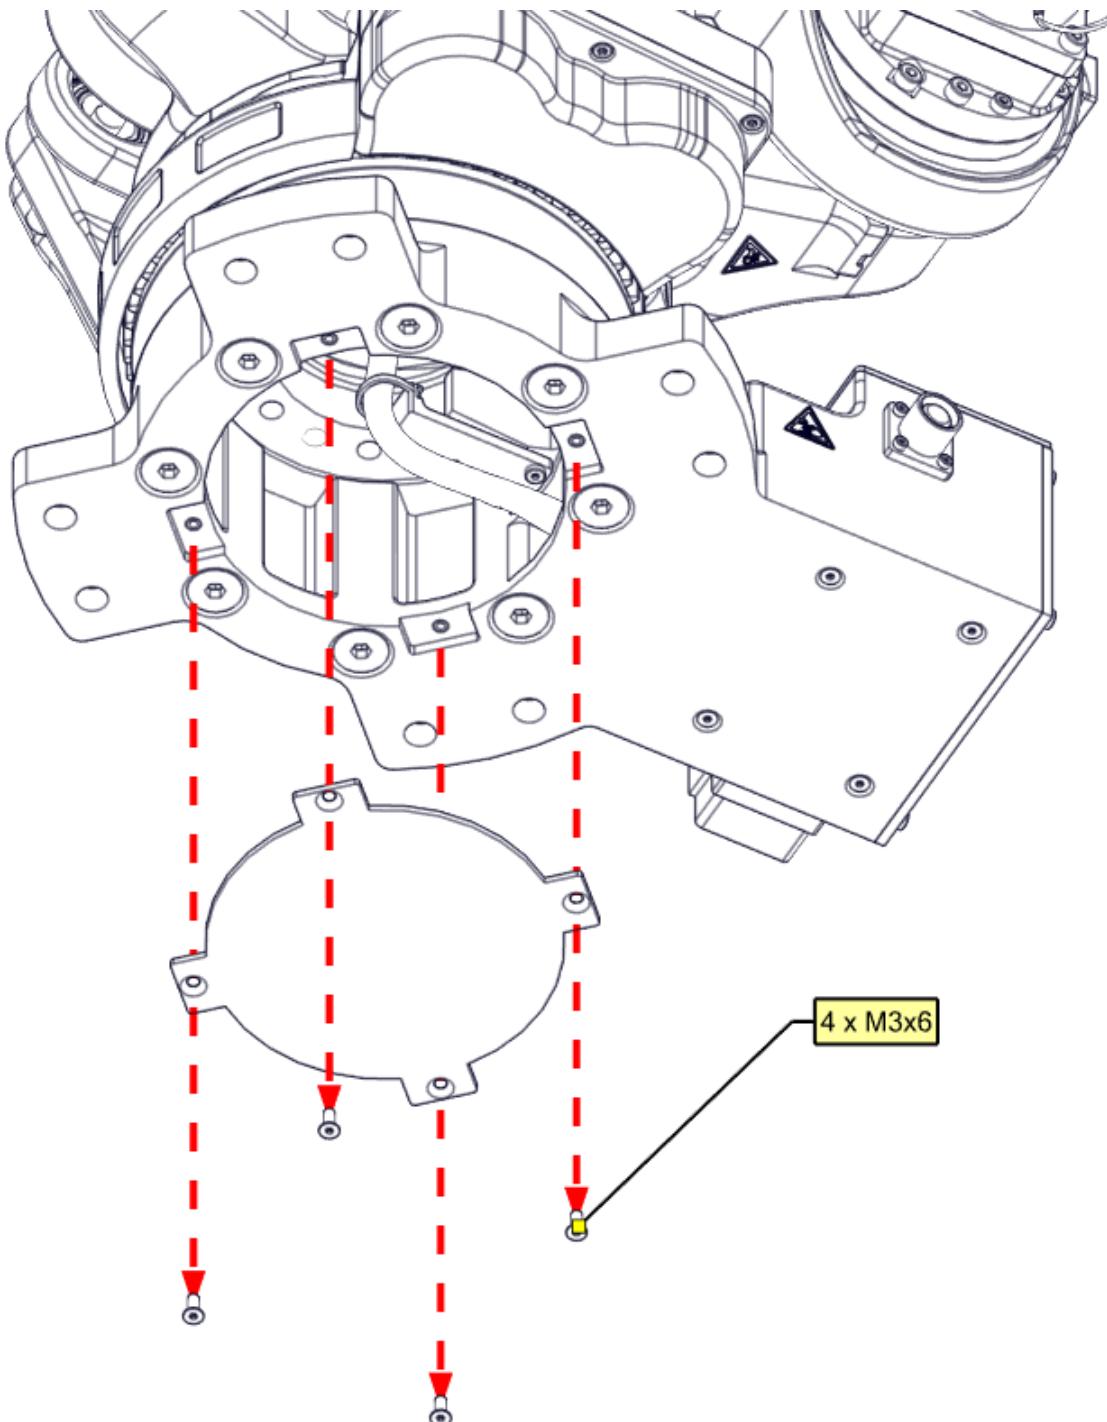



ASTORINO Linear Track Operation Manual

4.4 Removing the controller cover

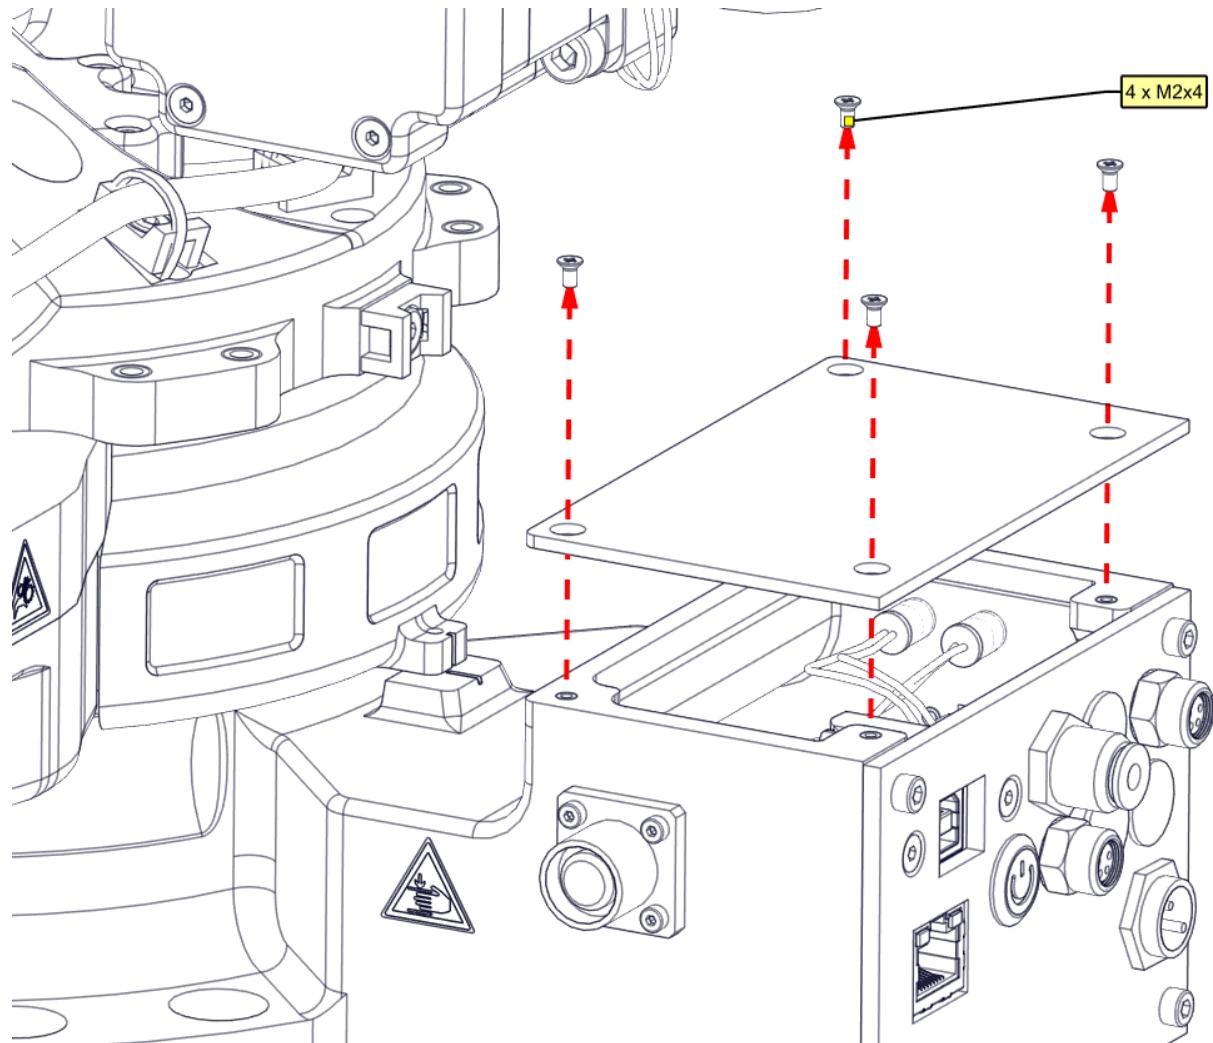



ASTORINO Linear Track Operation Manual

4.5 JT7 cables routing

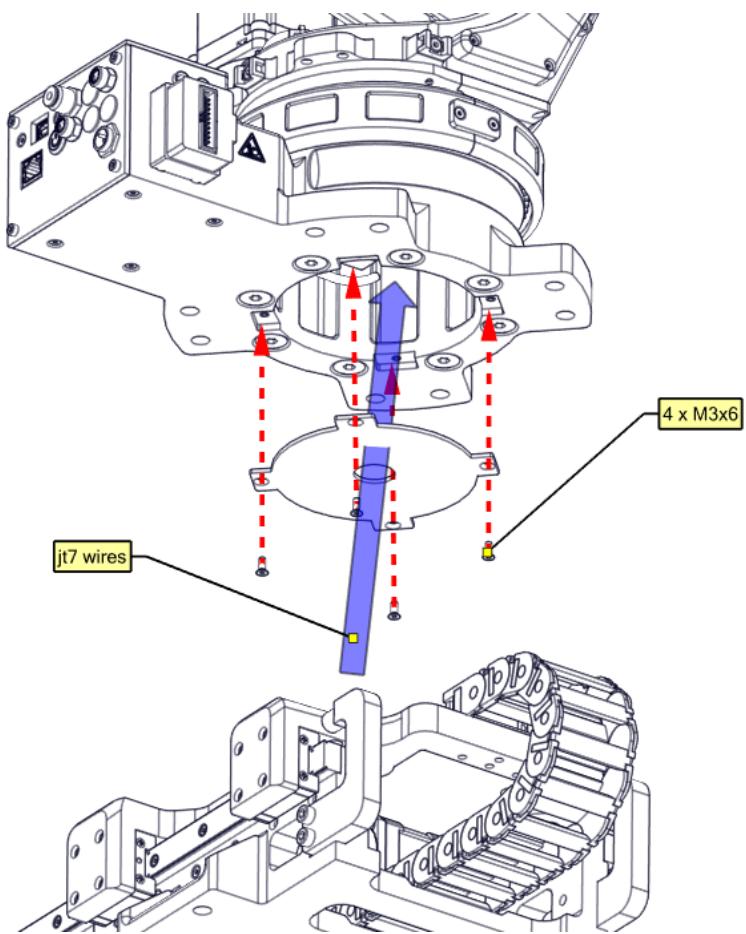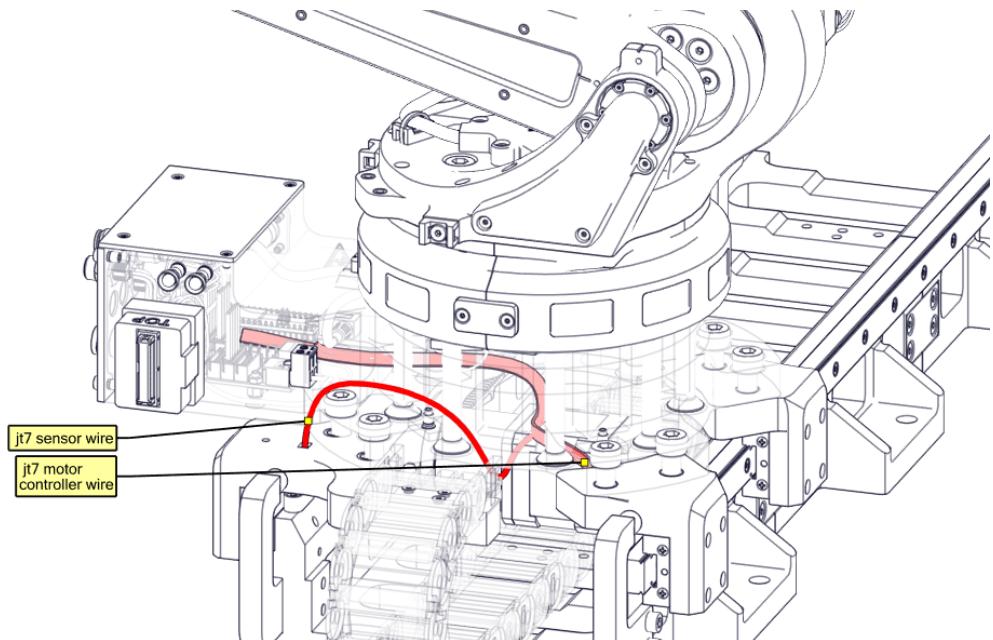


ASTORINO Linear Track Operation Manual

4.6 JT7 cable connection

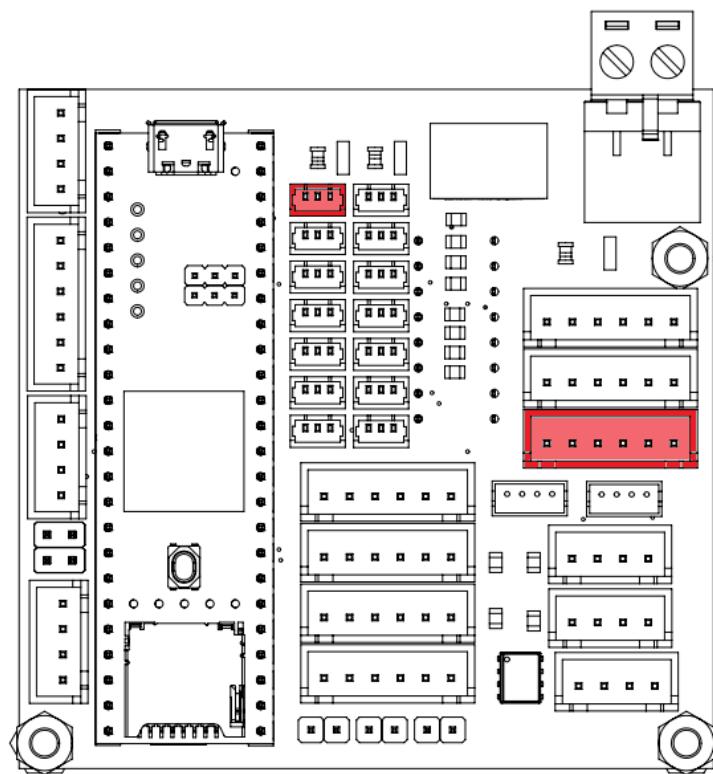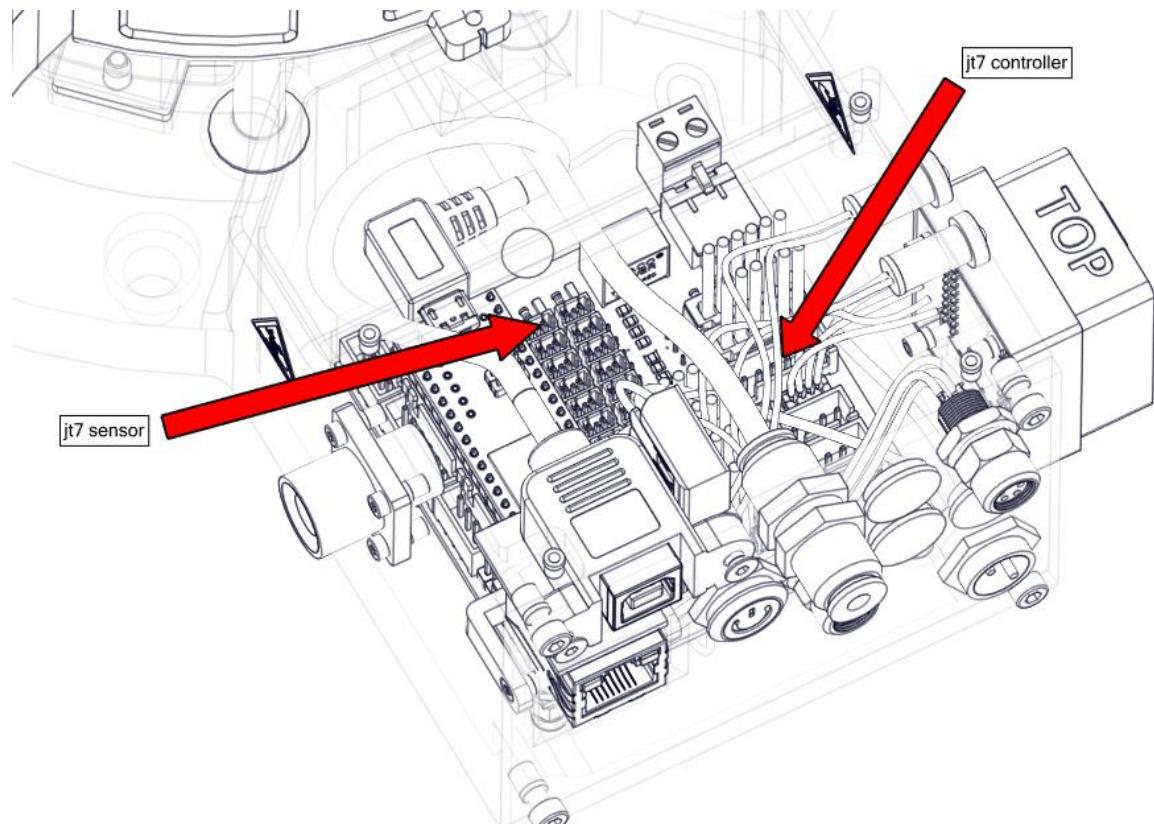

ASTORINO Linear Track Operation Manual

4.7 Cable routing


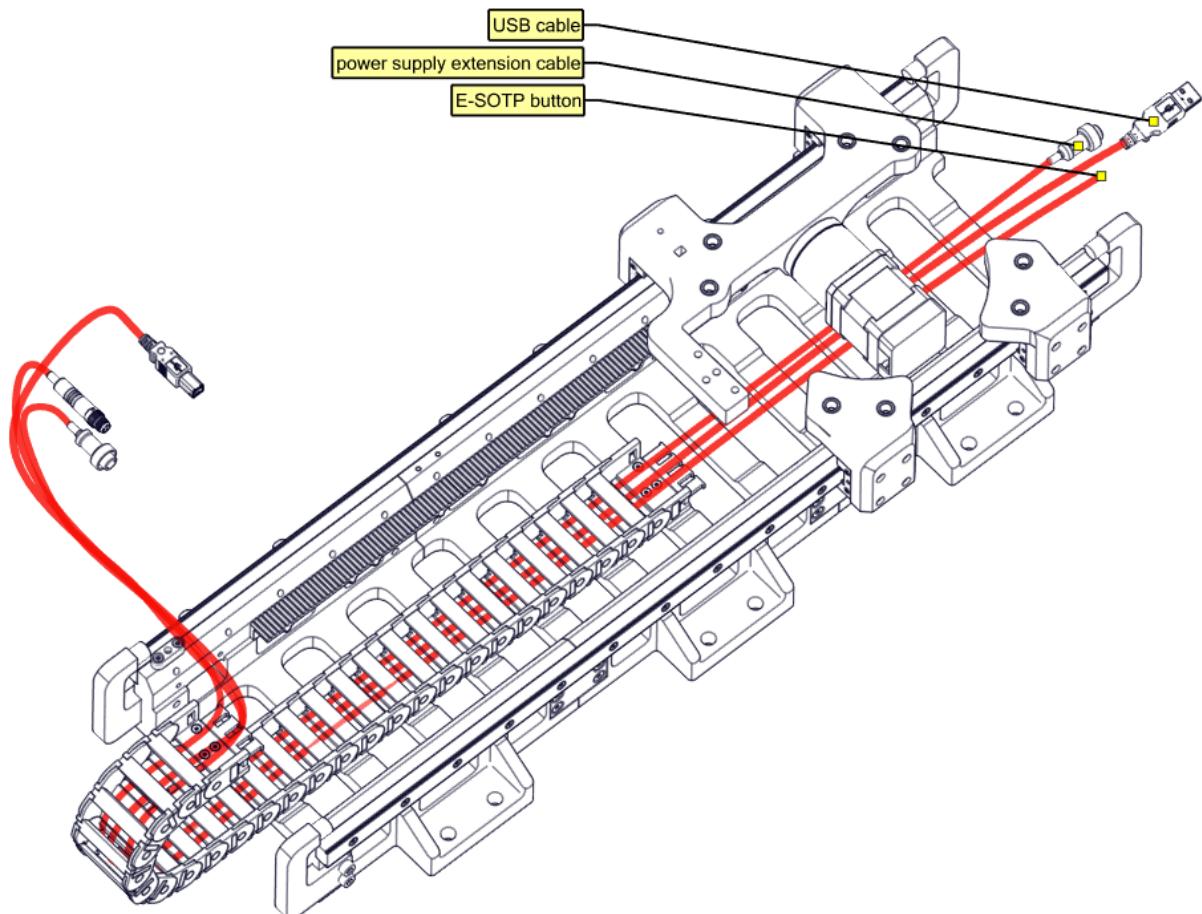


[ATTENTION]

If the IO24V module is used by a robot, the module should be wired similarly to the other cables shown above. (In kits containing the IO24V module and the linear track, a cable of the appropriate length is supplied.)

ASTORINO Linear Track Operation Manual

4.8 Robot assembly on the track

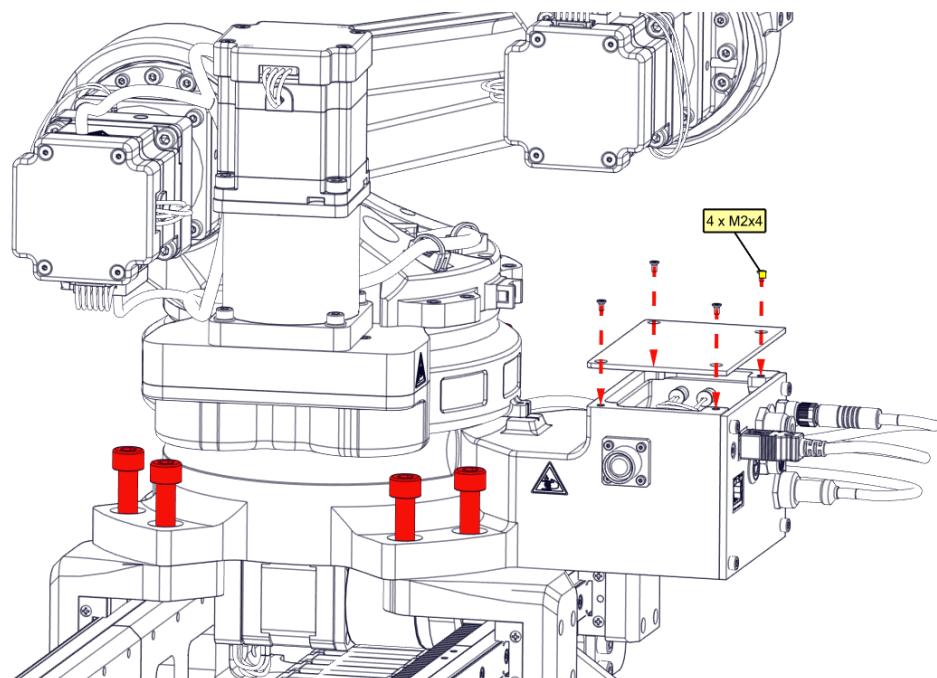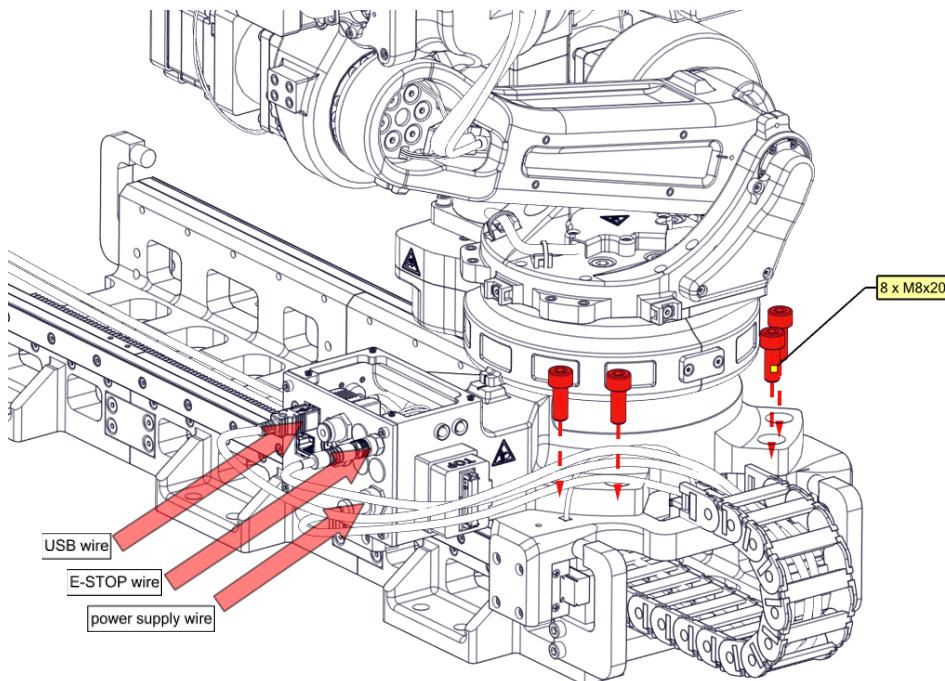



[ATTENTION]

Cables should be fastened to the holder located next to the jt7 sensor cable using a cable tie.

5 Enabling JT7 axis in software


⚠ WARNING

Before starting the process of adding the jt7 axis in the software, make sure that the robot is positioned on a track in such a way that the jt7 sensor is above the magnet and its signal is visible in the software under the tab sys. set.

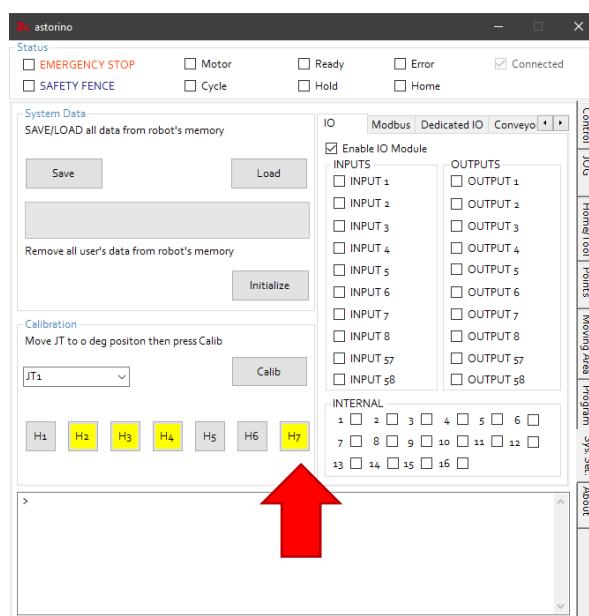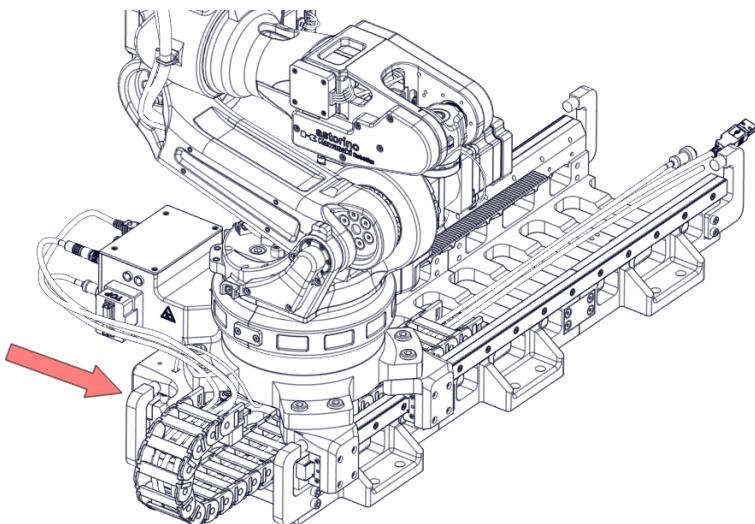

ASTORINO Linear Track Operation Manual


5.1 Change user level to 3:

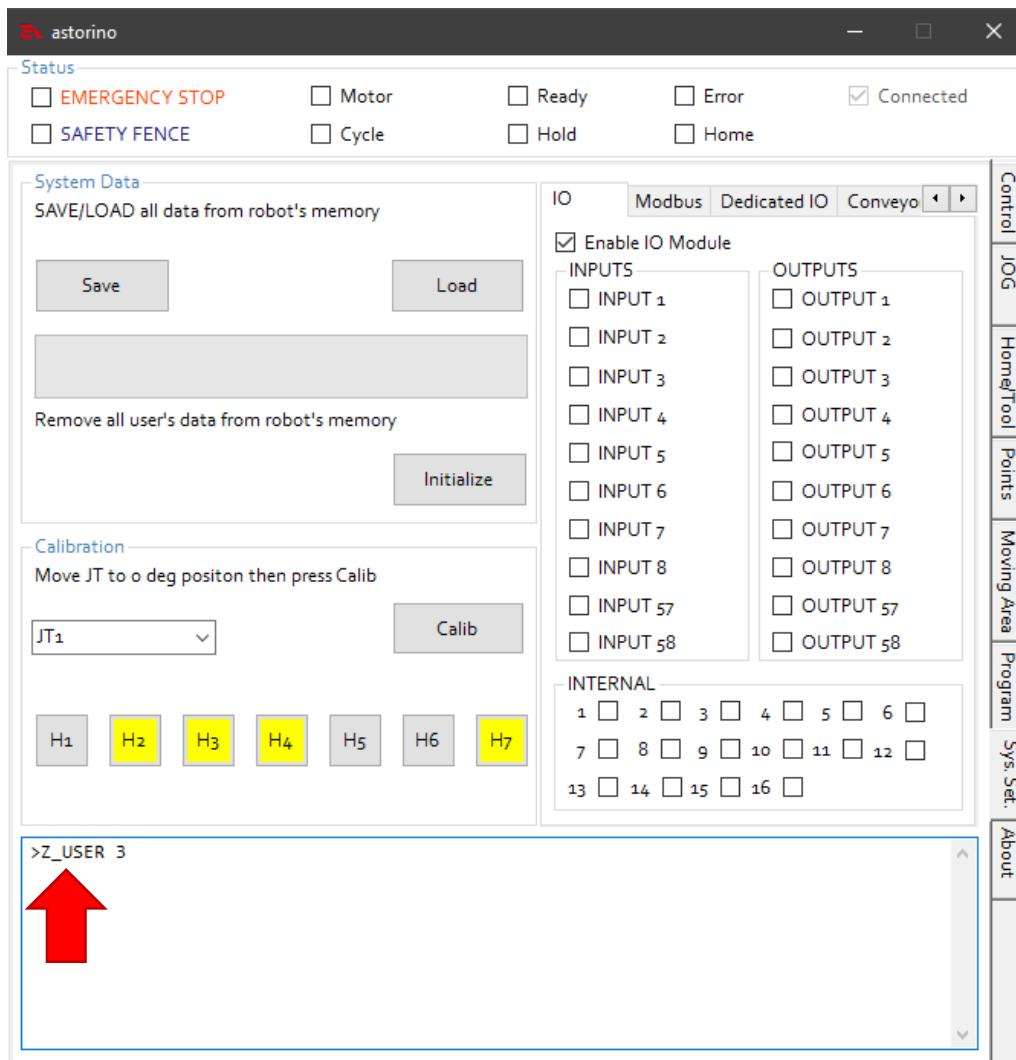

In the terminal type command: Z_USER 3 and press ENTER.

ASTORINO Linear Track Operation Manual


5.2 Set correct JT7 parameters

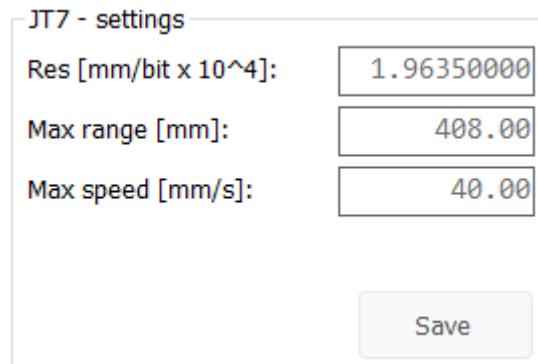

[ATTENTION]

Setting wrong parameters may result in hazardous situation, pay attention to set correct values.

5.3 Turn on the motors:



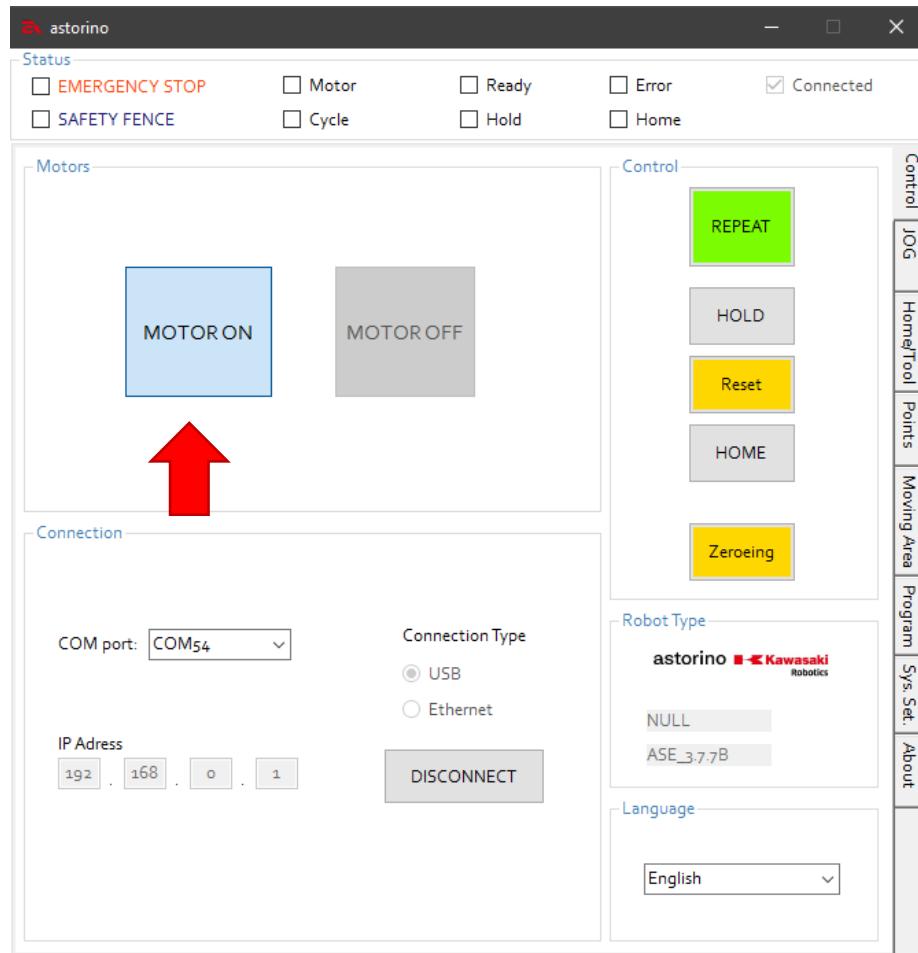


ASTORINO Linear Track Operation Manual

[ATTENTION]

Robot does not need to be ZEROED!

5.4 Enable JT7 in the controller:
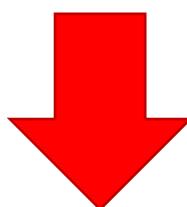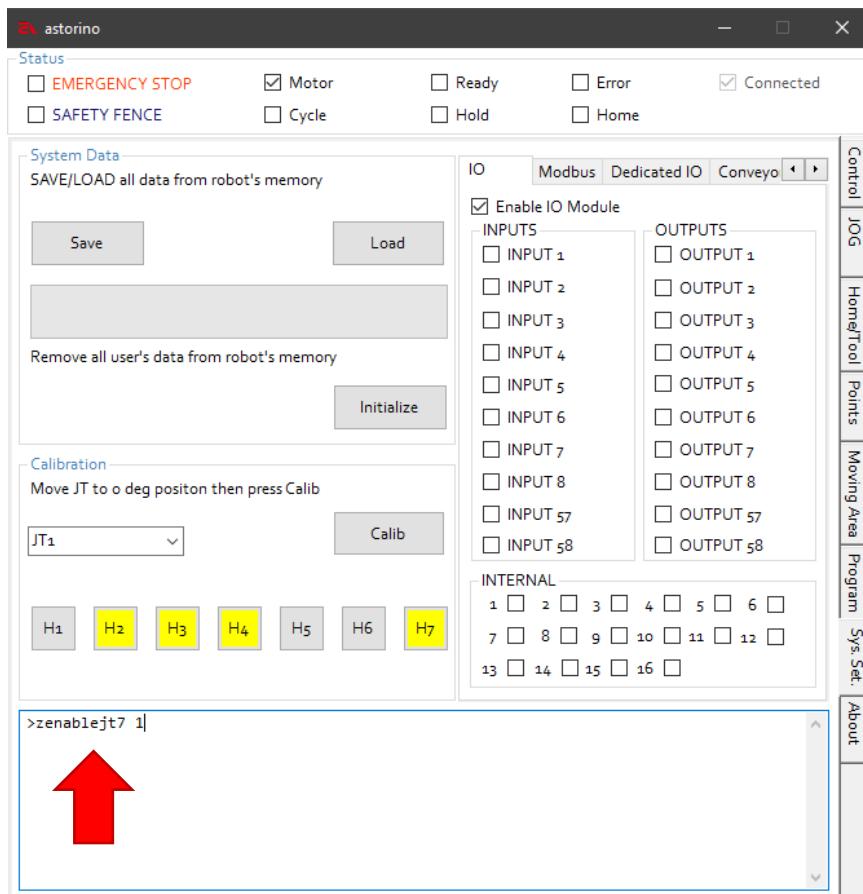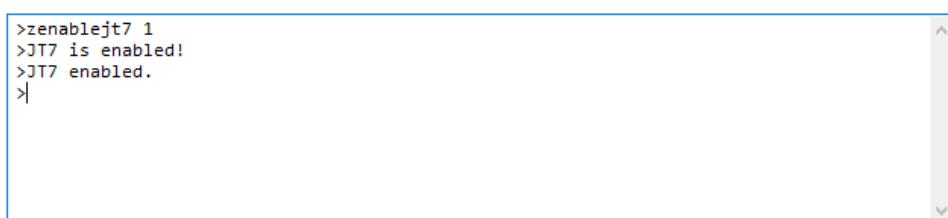
```
>zenablejt7 1
>JT7 is enabled!
>JT7 enabled.
>|
```

ASTORINO Linear Track Operation Manual


[ATTENTION]

When removing the robot from the track, use the command "zenablejt7 0" to disable its operation.

5.5 Calibration of the jt7 axis:

[ATTENTION]

During the calibration process, the robot will make small movements along the track!

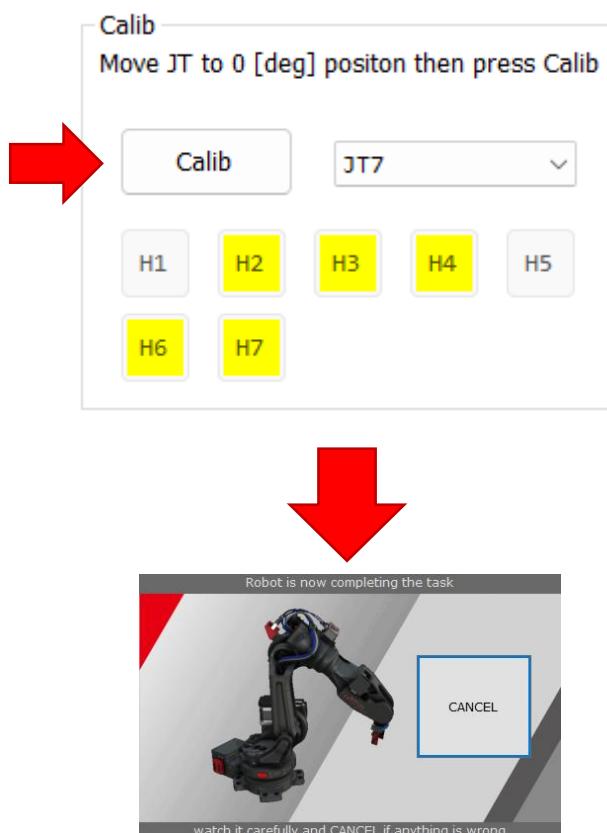

After a successful calibration process, the robot is able to fully cooperate with the running track and ready for use.

ASTORINO Linear Track Operation Manual

6 Linear track operations


Linear track can be operated via astorino software, Teach Pendant or program/commands. By default linear track is working in a cooperation mode with astorino robot. That means that there is a mathematical connection between those two devices.

6.1 Motion in Teach Mode

Linear track can be moved in two ways:

- In cooperation with a robot (BASE, TOOL, CONV)
- Without cooperation with a robot (JOINT)


Motion in JOINT mode:

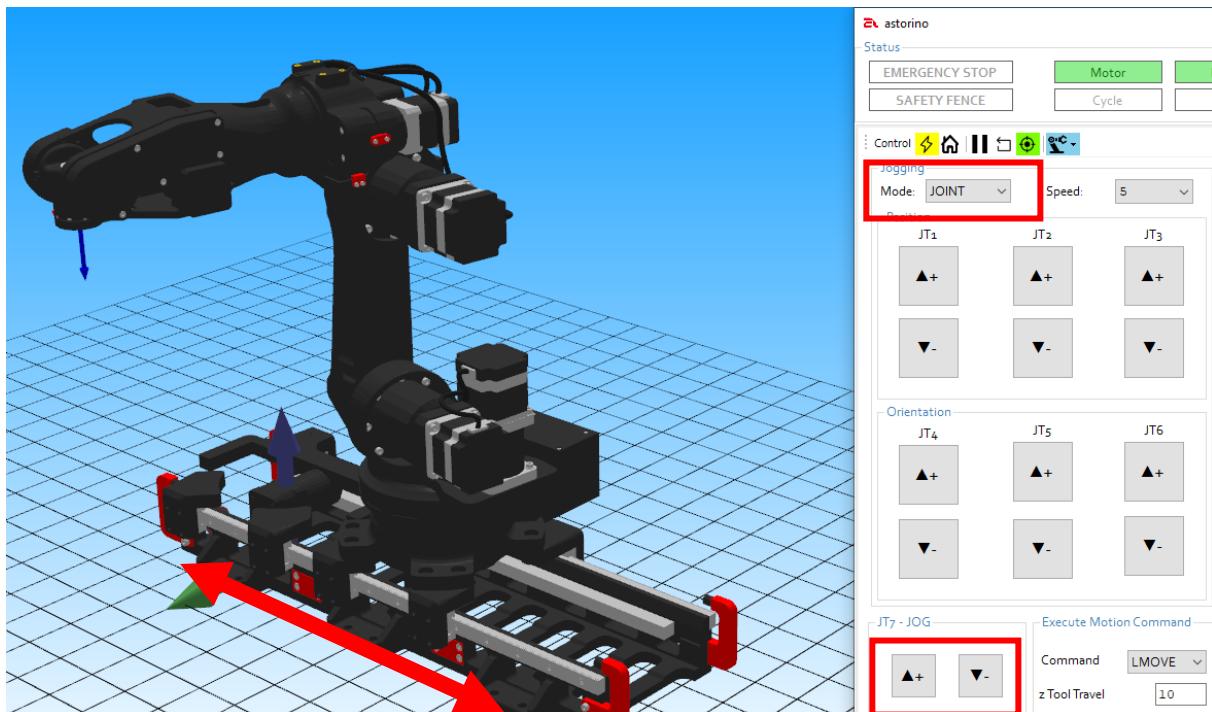

Robot TCP will not stay stationary

ASTORINO Linear Track Operation Manual


Motion in BASE, TOOL, CONV

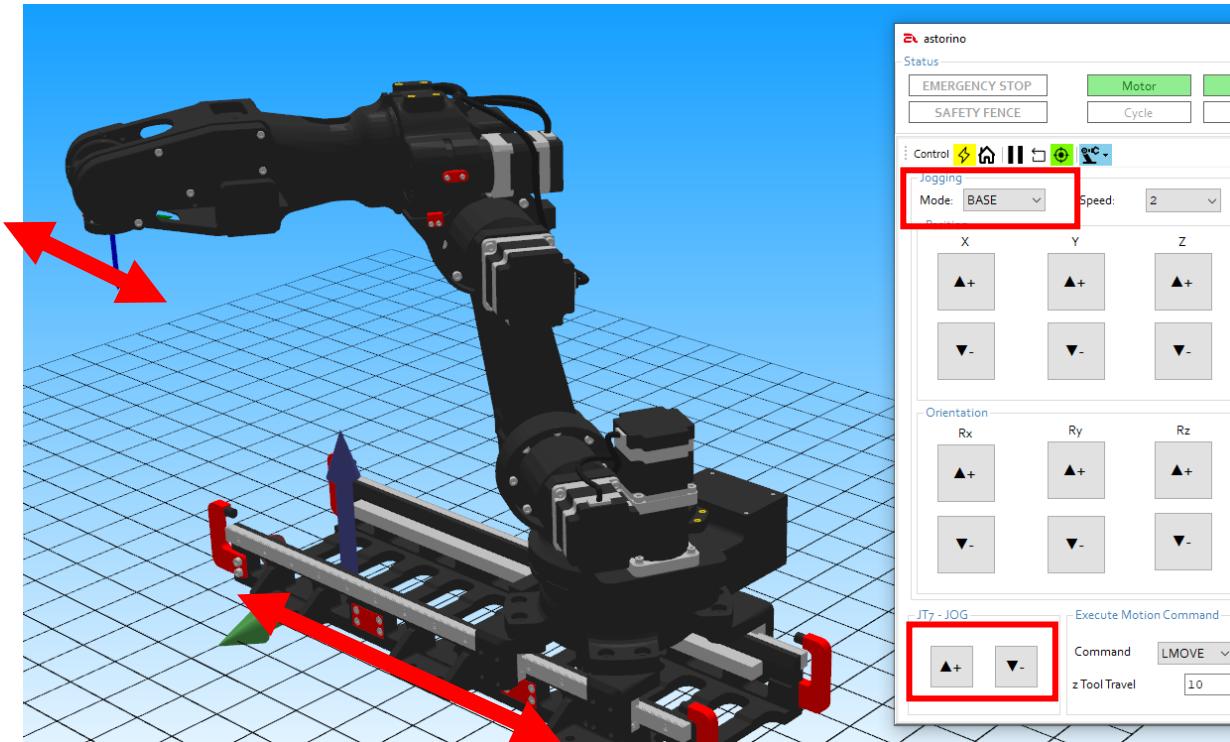

Robot TCP will stay stationary

6.2 Teaching points


Move the robot and linear track to desired position, select point number to be recorded and then press TEACH

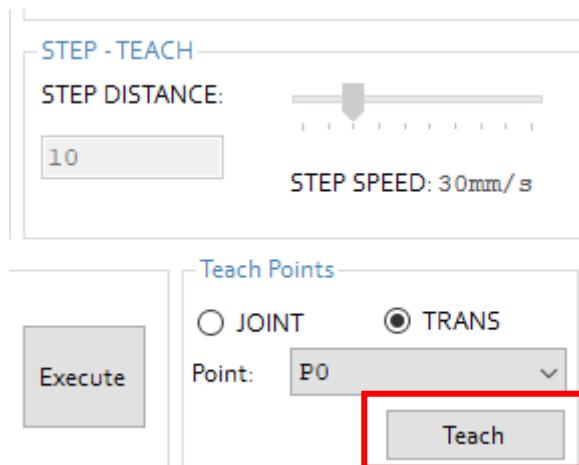

ASTORINO Linear Track Operation Manual

6.3 Using Linear track in program

Linear track is “invisible” for the user from programming point of view, just use normal commands like LMOVE and stored points.

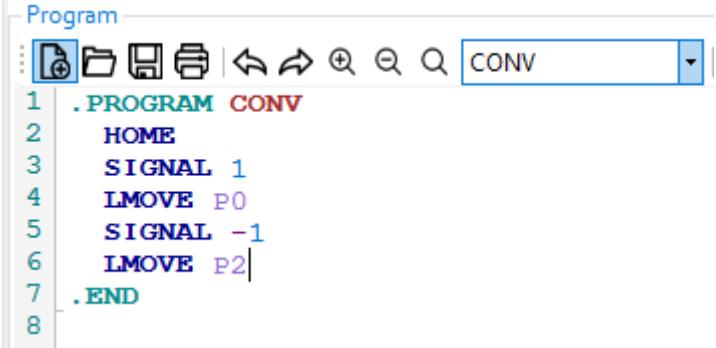

```
1 .PROGRAM CONV
2 HOME
3 SIGNAL 1
4 LMOVE P0
5 SIGNAL -1
6 LMOVE P2
7 .END
8
```

Robots controller will automatically calculate the desired motion with cooperation with a linear track.

7 MANUFACTURER DATA

Kawasaki Robotics Astorino
Linear Track Operation Manual

2025-09: 3rd edition

Publication: ASTOR AND KAWASAKI Robotics GmbH

Copyright © 2025 ASTOR & KAWASAKI Robotics GmbH.
All rights reserved.