

FA-24SW-011

How to Apply for a neoROSET License File (Floating)

Apr. 17th, 2025


Kawasaki Heavy Industries, Ltd.

Robot Business Division
Precision Machinery & Robot Company


Introduction

■ How to Apply for neoROSET Node-locked License

- Node-locked license

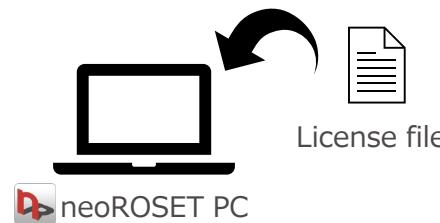

- Floating license

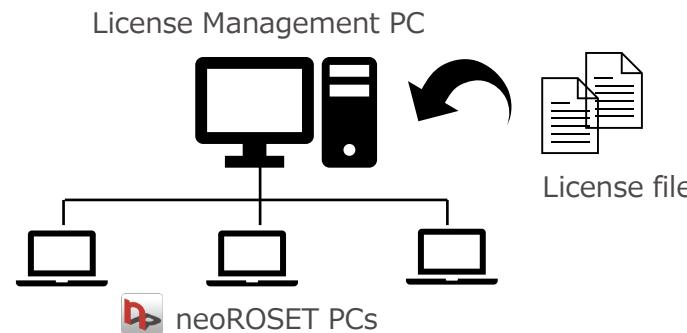

(Floating)

Setting up device managing the license


Install CodeMeter Runtime



Apply for a license



License Enforcement

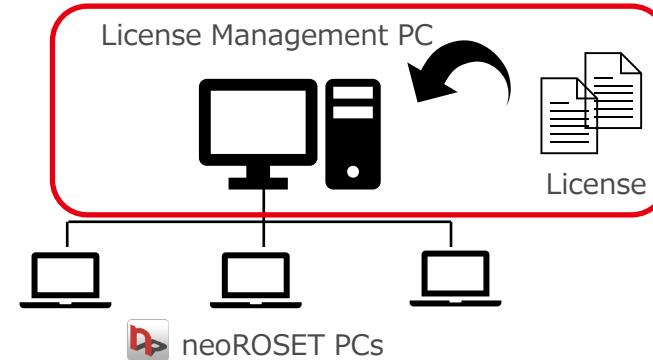

System requirements for License Management PC

System	Requirement
Operating system(OS)	Windows 32bit/64bit <ul style="list-style-type: none">• Windows 11• Windows 10• Windows Server 2022• Windows Server 2019• Windows Server 2016
CPU	1GHz or more
RAM	1GB RAM or more
System Drive	Free space 200MB

Regarding the License Management PC:

- **Virtual machines and containers are not supported.**
- Only one type of license can be applied to a single license management PC.
- It is possible to use neoROSET on the license management PC. In this case, please refer to the system requirements of neoROSET. By install neoROSET, you can skip the installation of CodeMeter Runtime mentioned later. Please proceed with the procedure from "P.12 [Floating] How to Apply (1)."

After this page,
documenting tasks on License Management PC.


[Floating] Install CodeMeter Runtime (1)

- ① Run the enclosed "CodeMeterRuntime.exe" and click "Next".




[Floating] Install CodeMeter Runtime (2)

- ② Check "I accept the terms of the License Agreement" and click "Next".

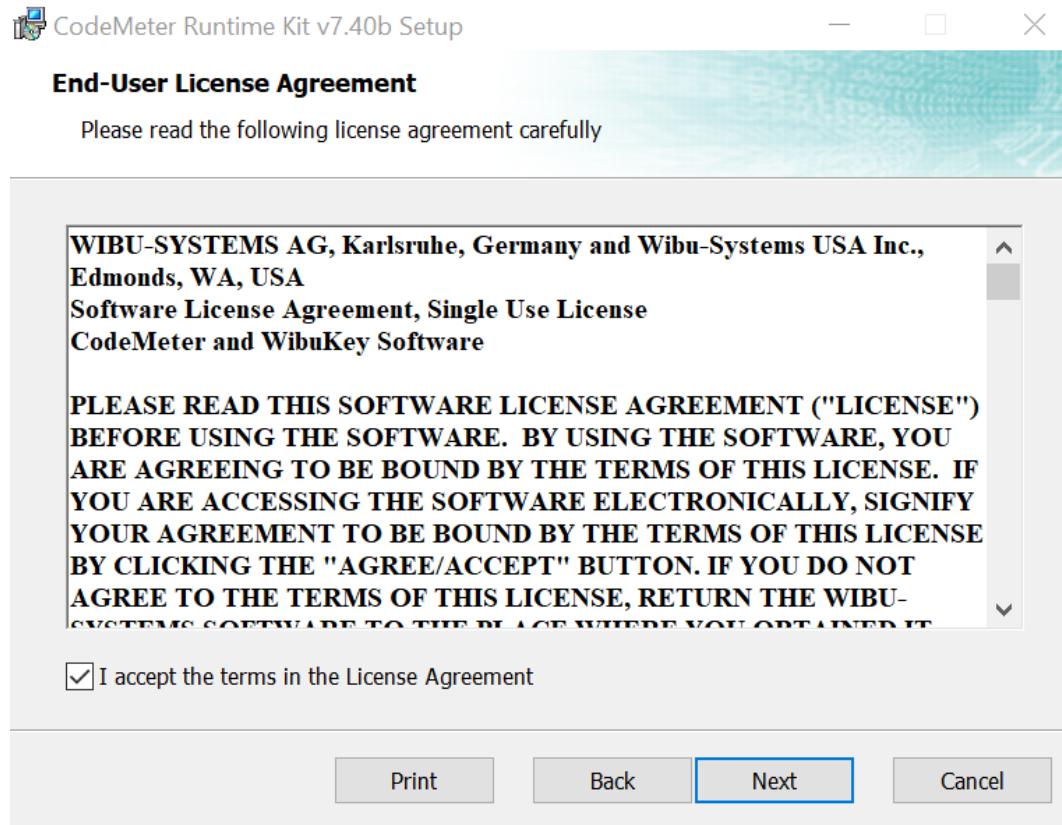


[Floating] Install CodeMeter Runtime (3)

- ③ Click “Next”.

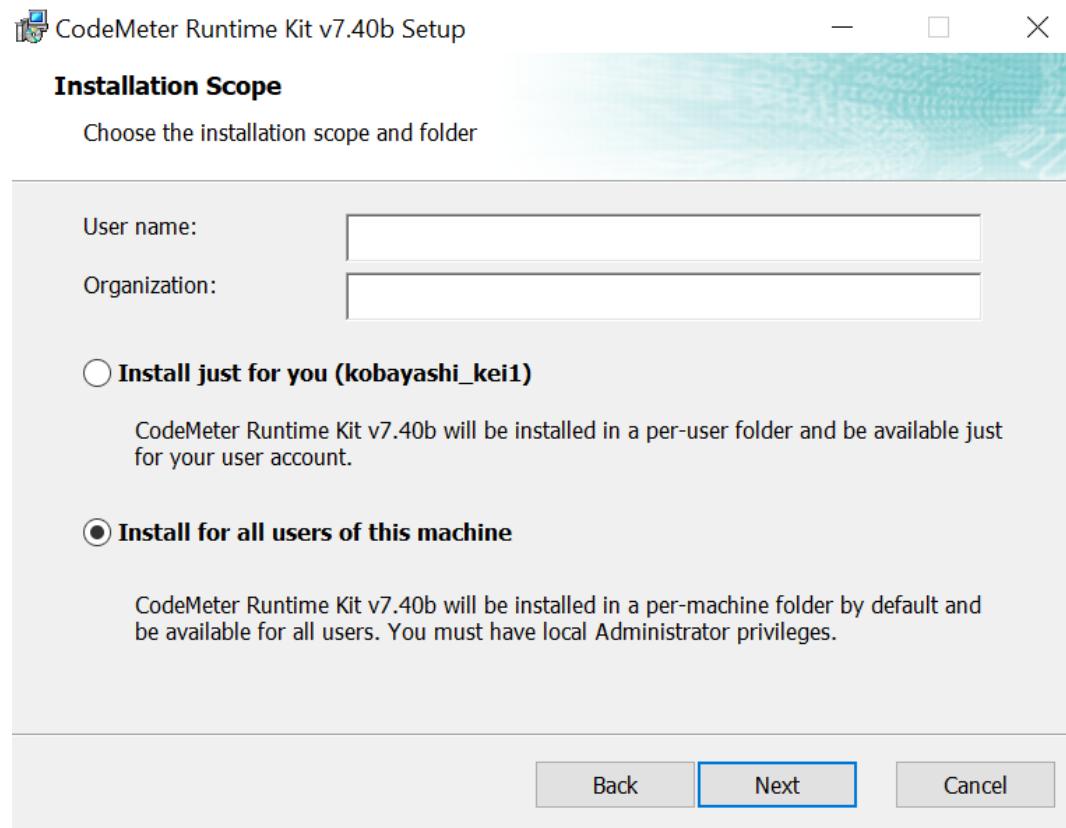


[Floating] Install CodeMeter Runtime (4)

- ④ Click “Next”.

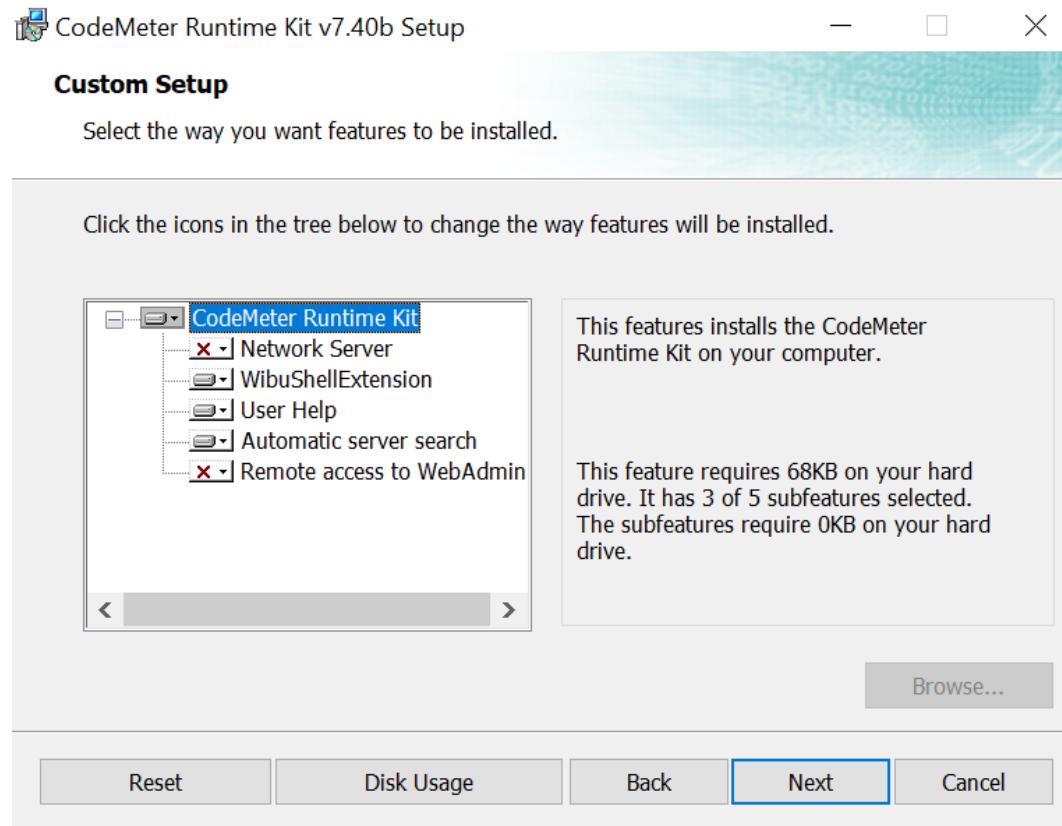


[Floating] Install CodeMeter Runtime (5)

- ⑤ Click "Install"

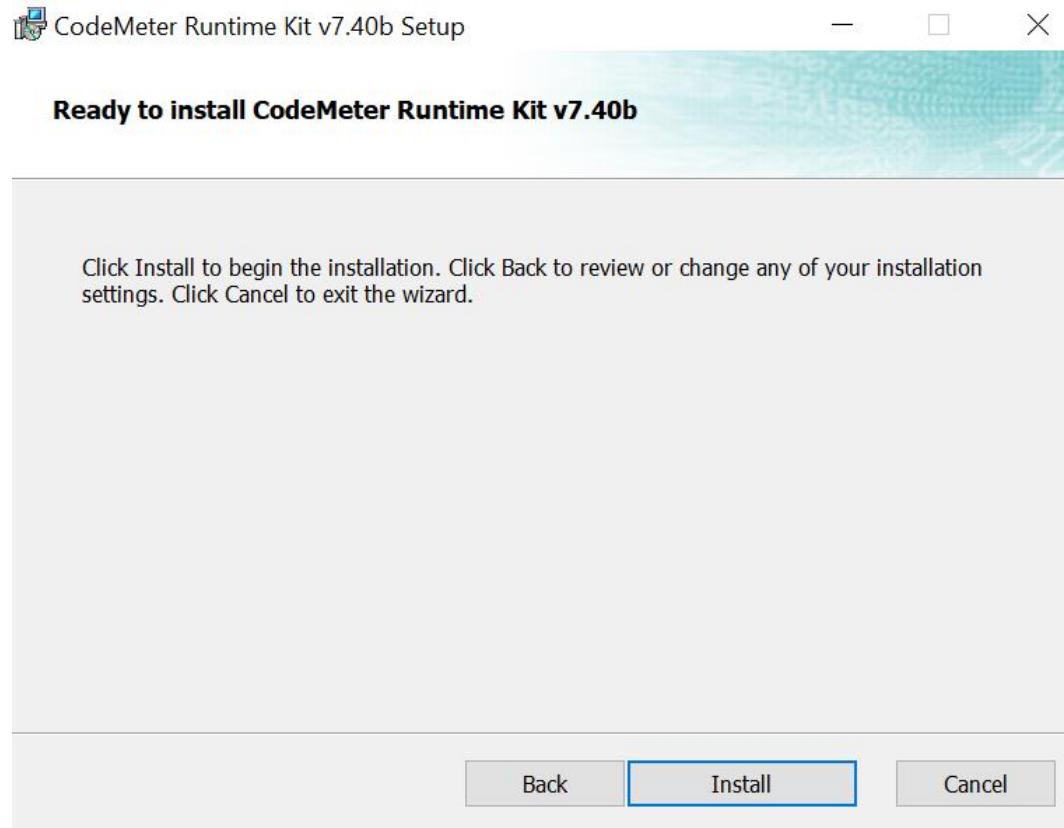


[Floating] Install CodeMeter Runtime (6)

- ⑥ After the installation is complete, click "Next".

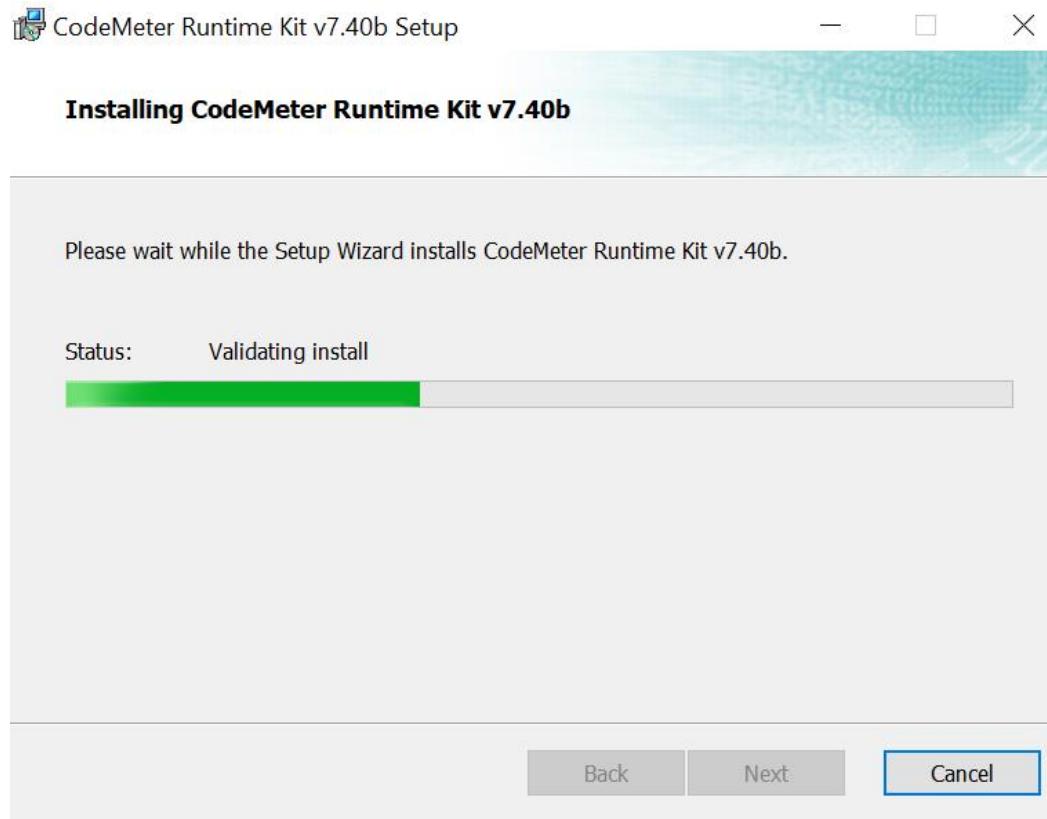


[Floating] Install CodeMeter Runtime (7)

- ⑦ Click “Finish”.

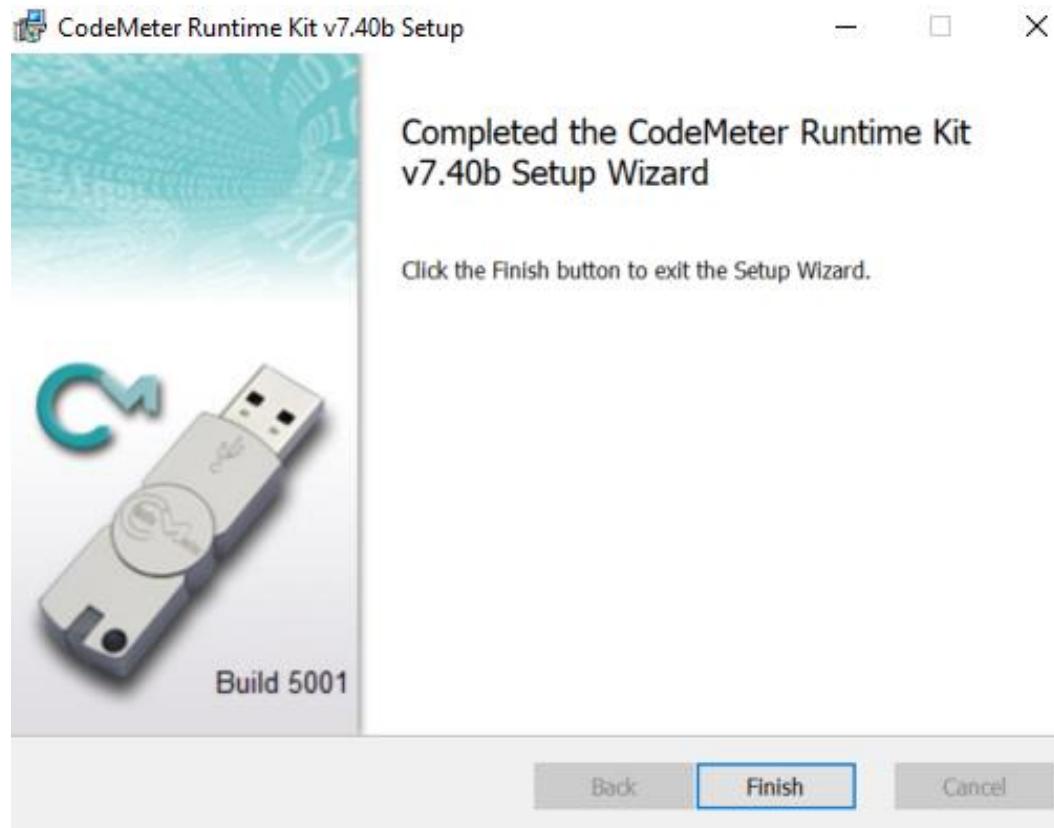

[Floating] Install CodeMeter Runtime (8)


- ① Launch "  CodeMeter Control Center " from Windows programs.
- ② Drag and drop the enclose "neoROSET_CmActLicense_6001899.WibuCmLif" into CodeMeter Control Center.

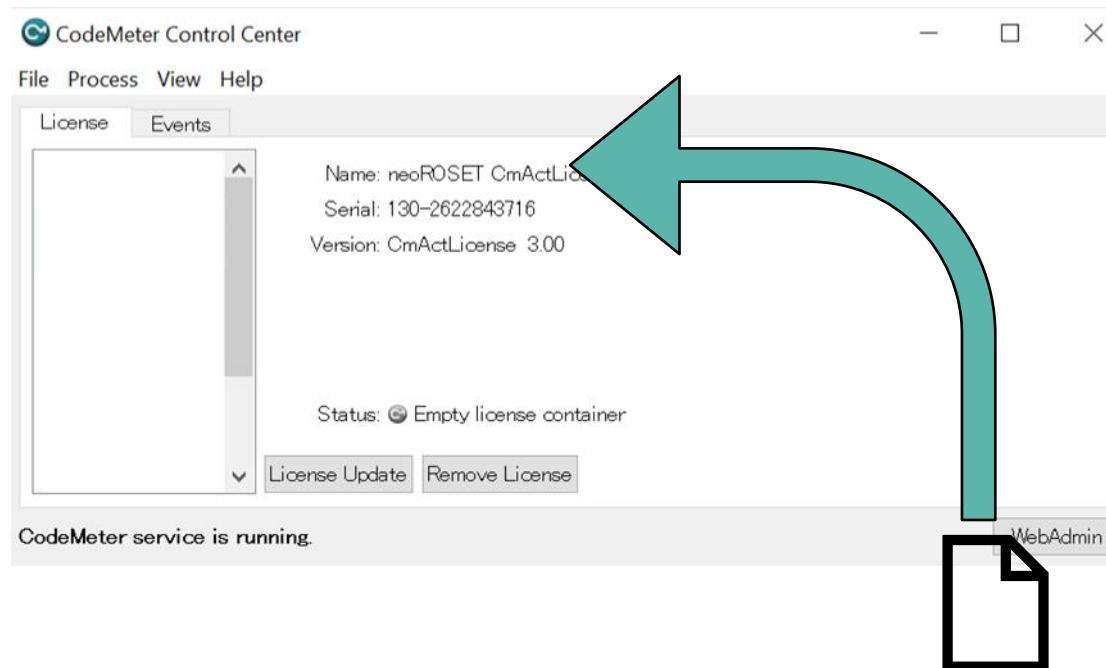

neoROSET_CmActLicense_6001899.WibuCmLif


【Floating】 How to Apply (1)

- ① On the "CodeMeter Control Center" screen, select [neoROSET CmActLicense~] and click "Update License".

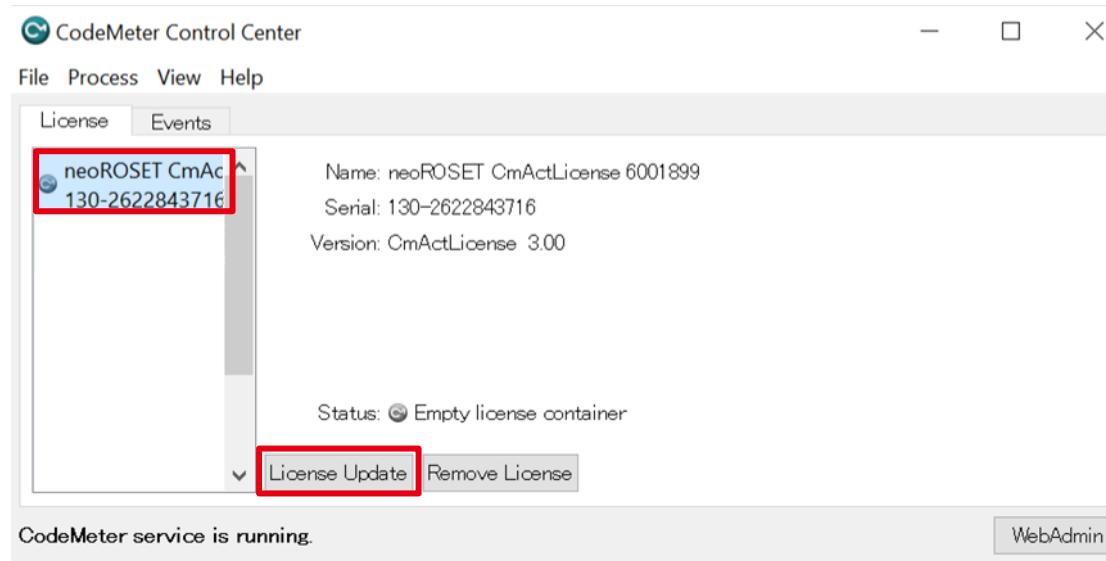


【Floating】 How to Apply (2)

- ② Click “Next”.

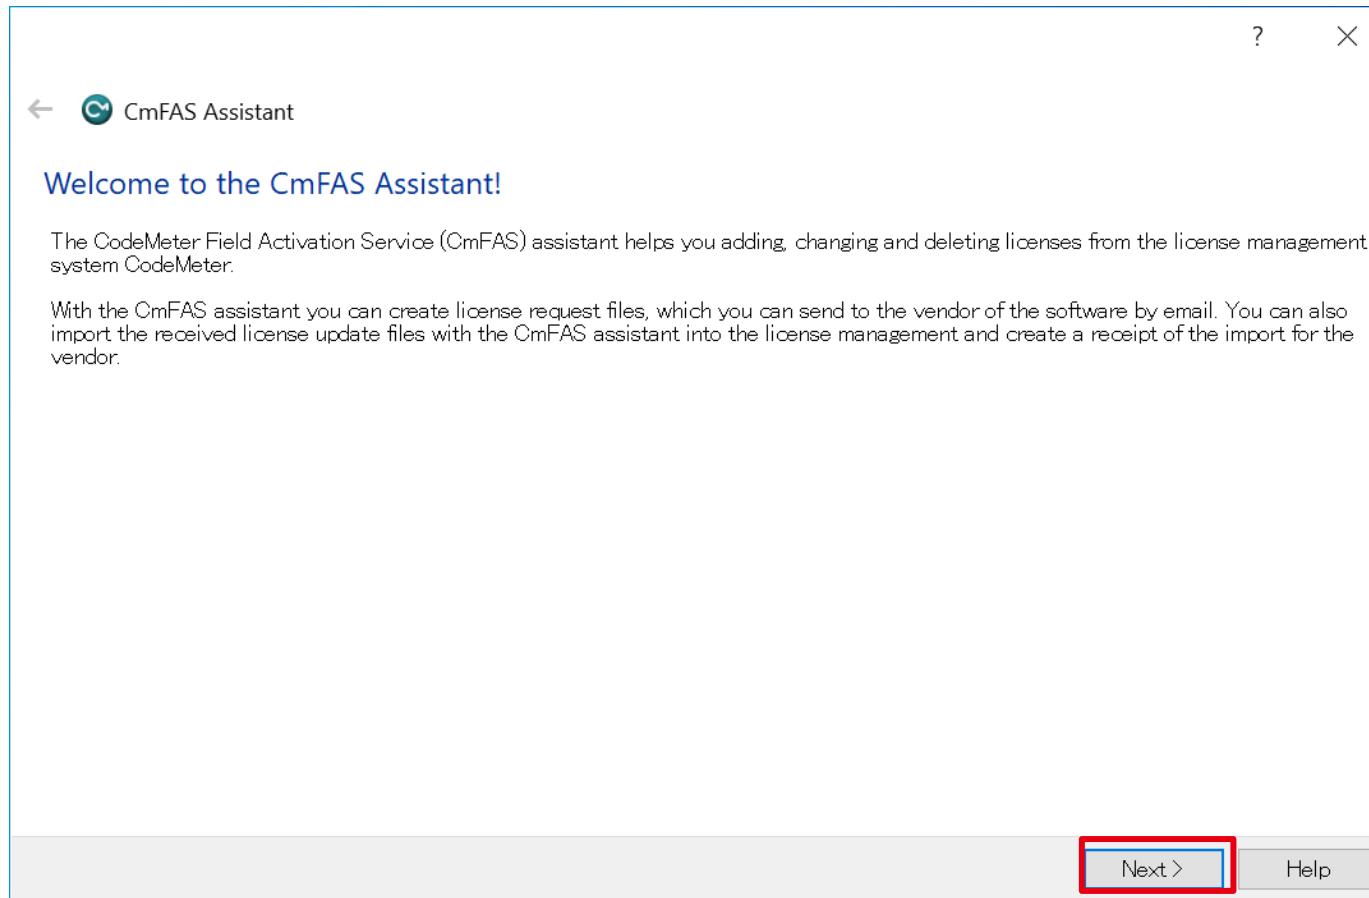


【Floating】 How to Apply (3)

- ③ Select "Create license request" and click "Next"

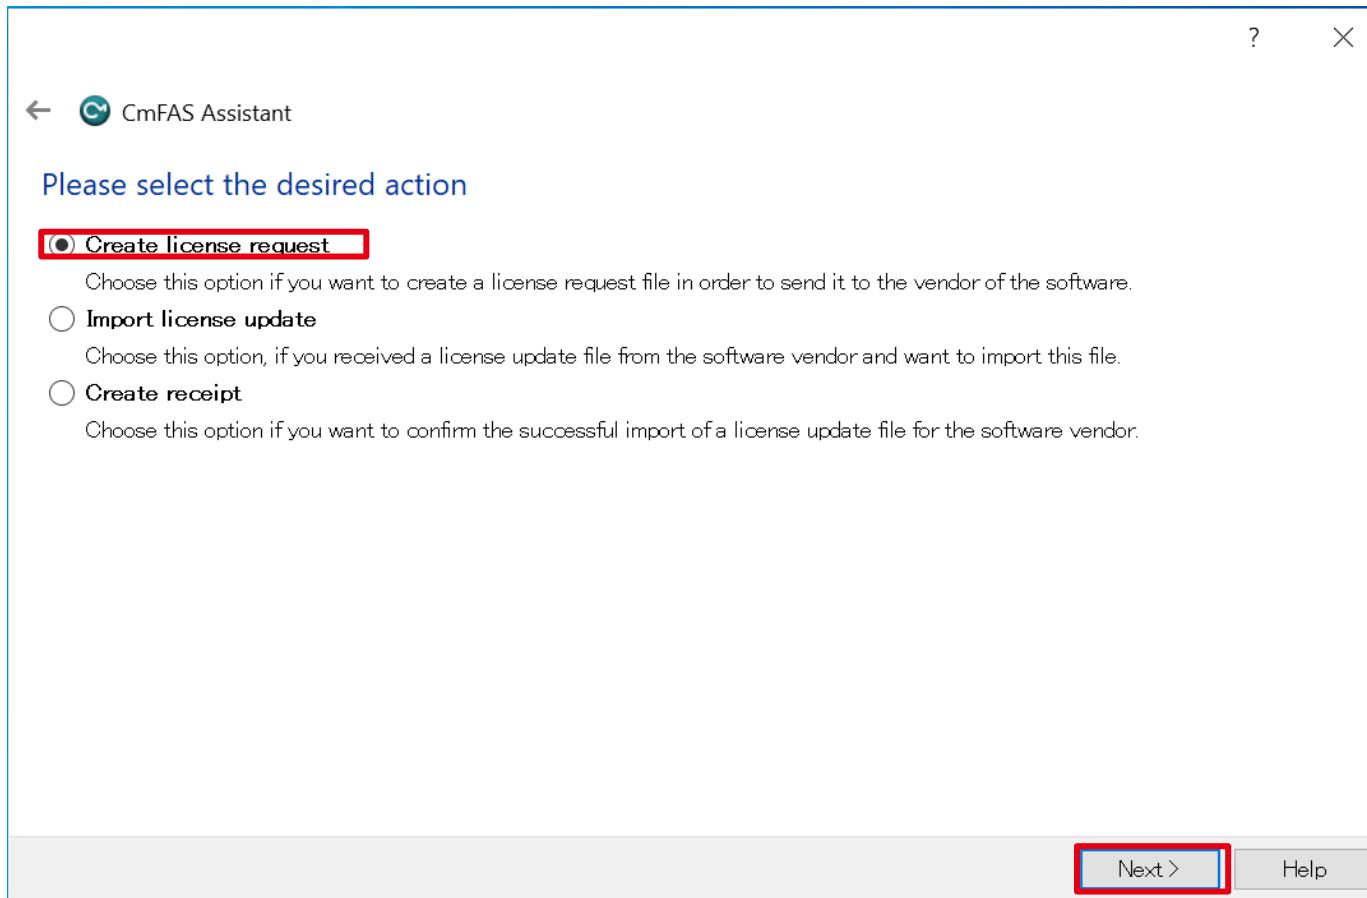


【Floating】 How to Apply (4)

- ④ Click “Commit”.

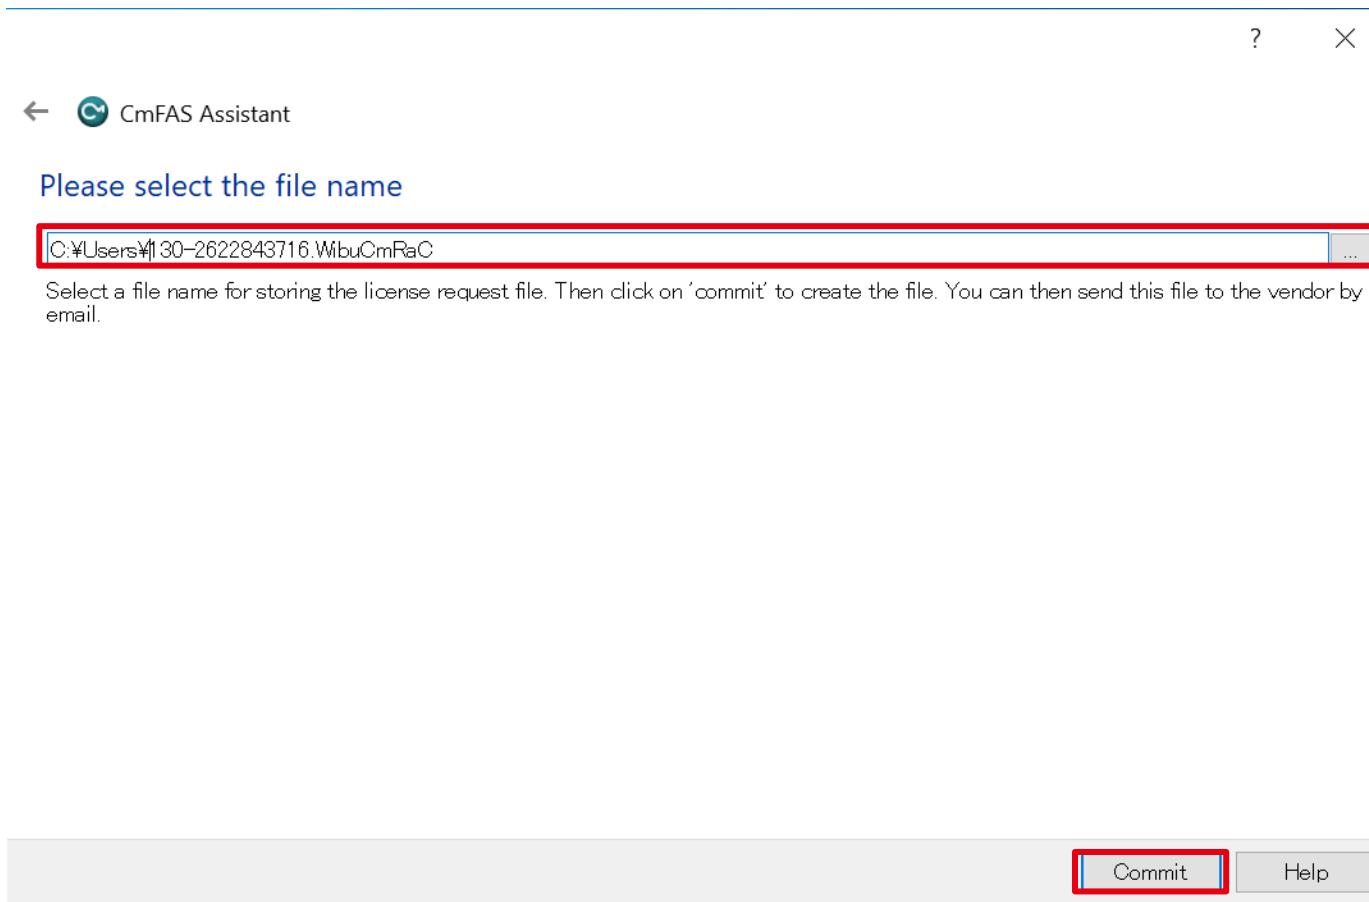


【Floating】 How to Apply (5)

- ⑤ The license request file has been created.
Please send the created file to your supplier.

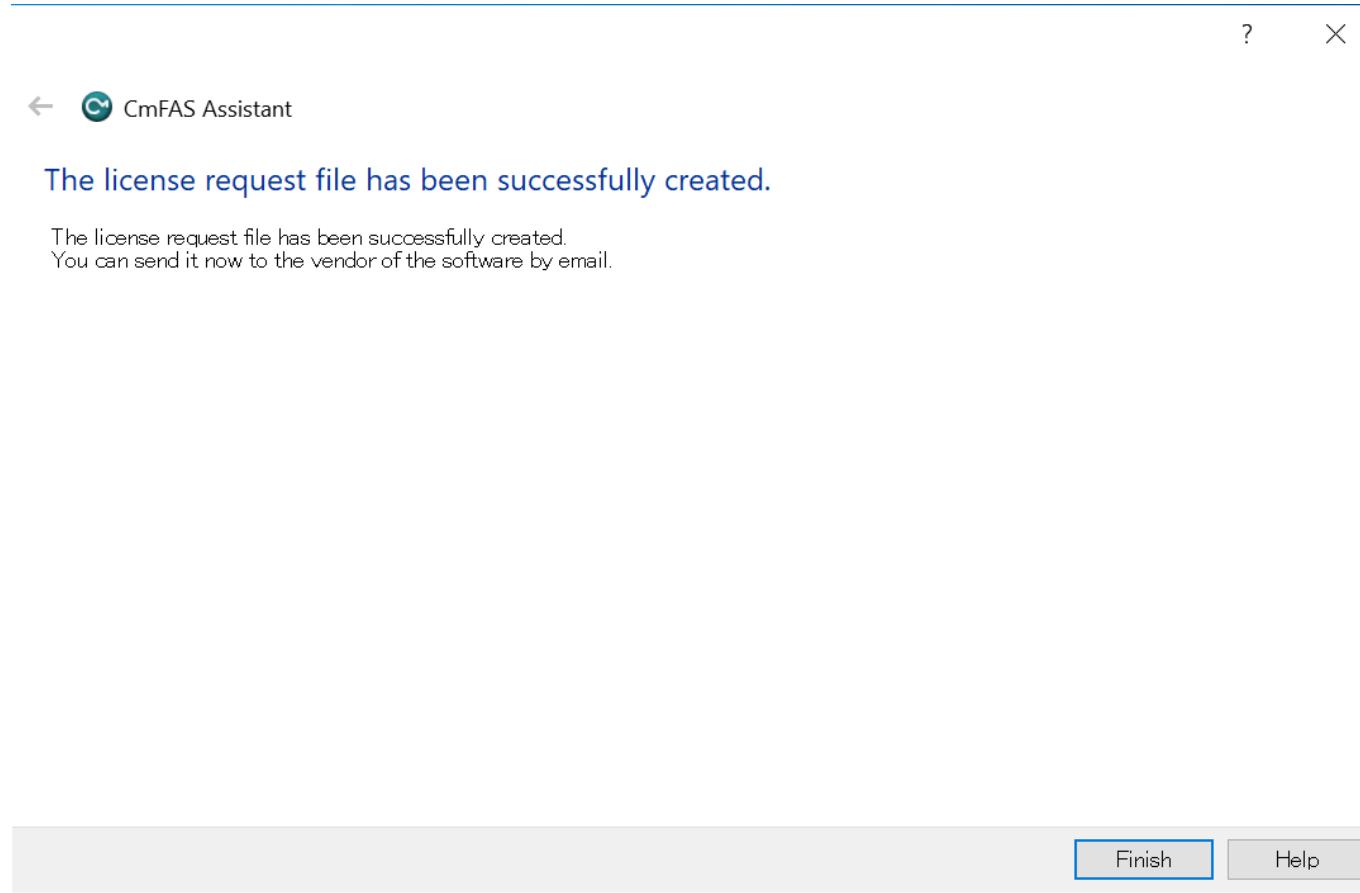

[Floating] How to activate license (1)

- ① Drag and drop the license file sent to you by Kawasaki into CodeMeter Control Center.

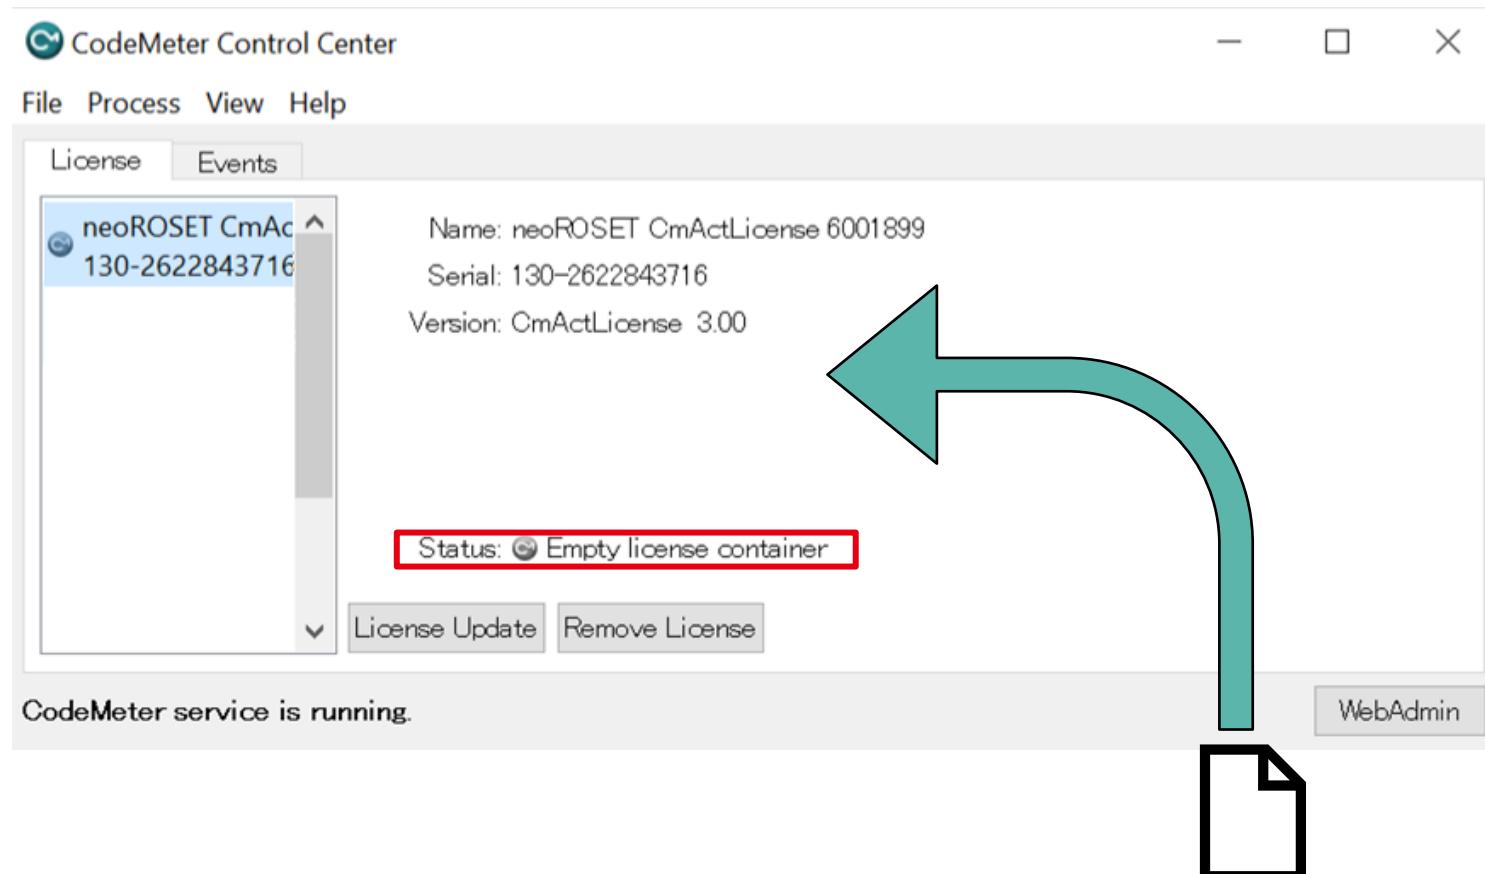


License file

*Please whitelist the domain @global.kawasaki.com to ensure we can receive emails from this address.


【Floating】 How to activate license (2)

- ② Click "WebAdmin".

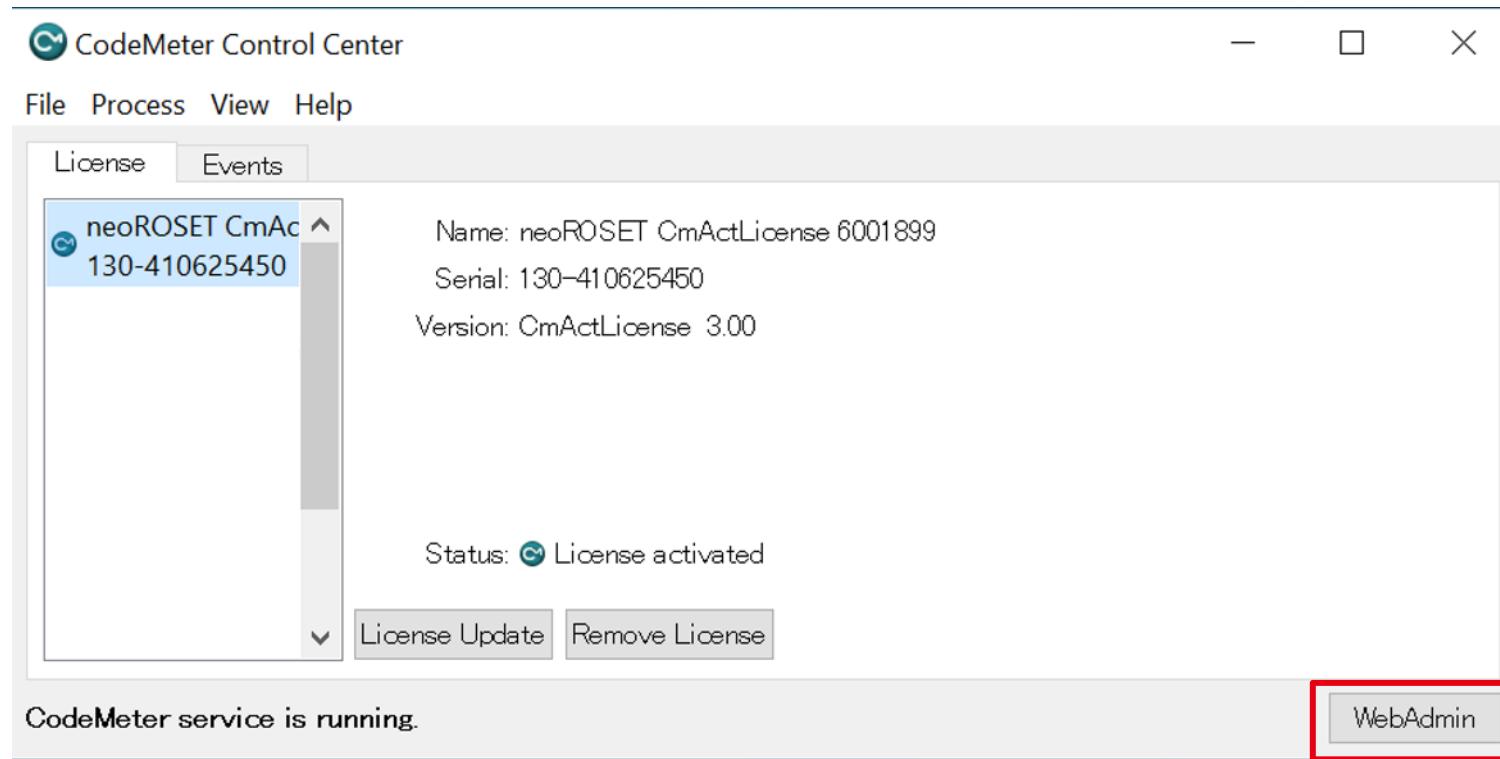


[Floating] How to activate license (3)

- ③ Click “Configuration” → “Server” → “Server Access”.

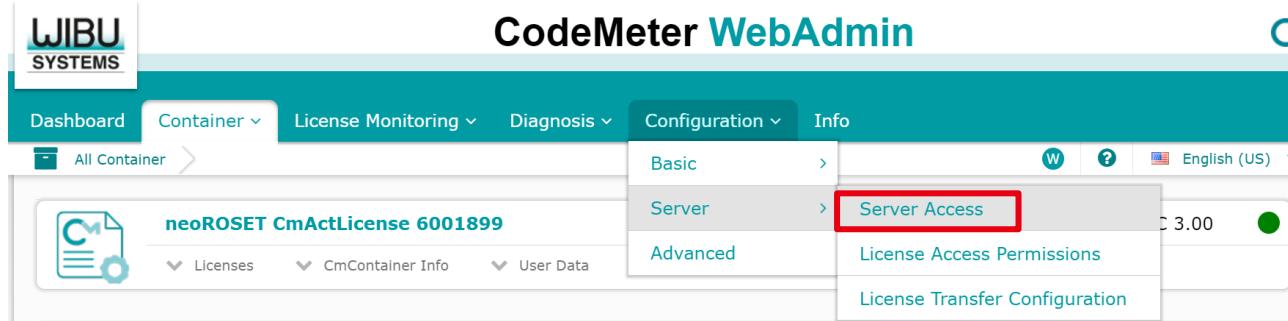


- ④ On the Server Access tab, check “Enable” for the network server, and then click “Apply”.

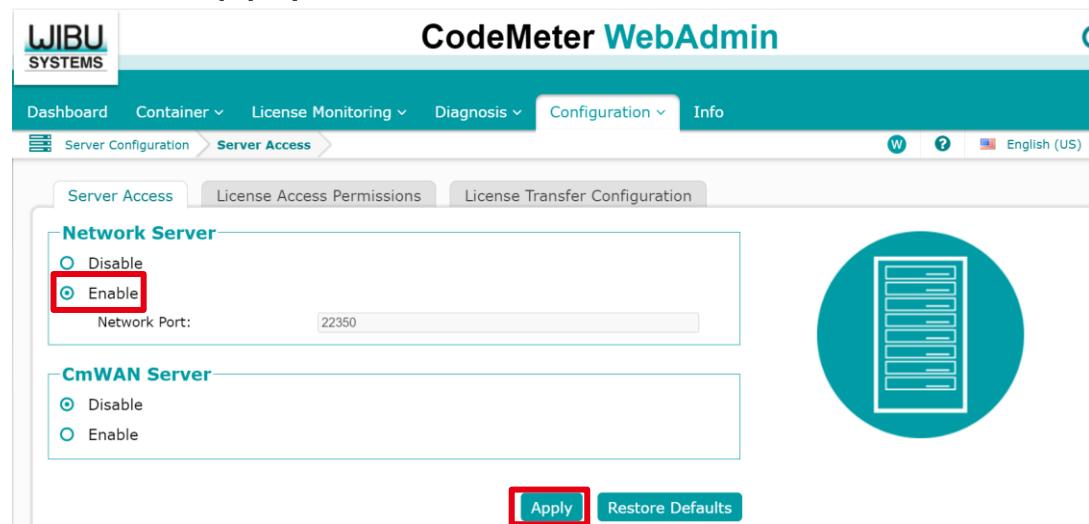

[Floating] Setting up neoROSET PC


Specifying a floating server

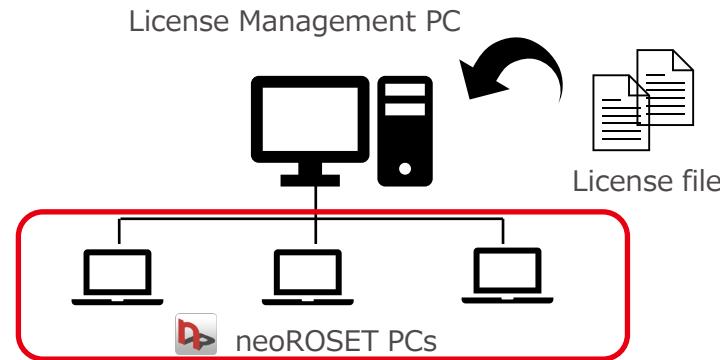

After this page, documenting the tasks on neoROSET PCs.


【Floating】Setting up neoROSET PC

- ① Launch "CodeMeter Control Center" from Windows programs.
- ② On the "CodeMeter Control Center" screen, click "WebAdmin".

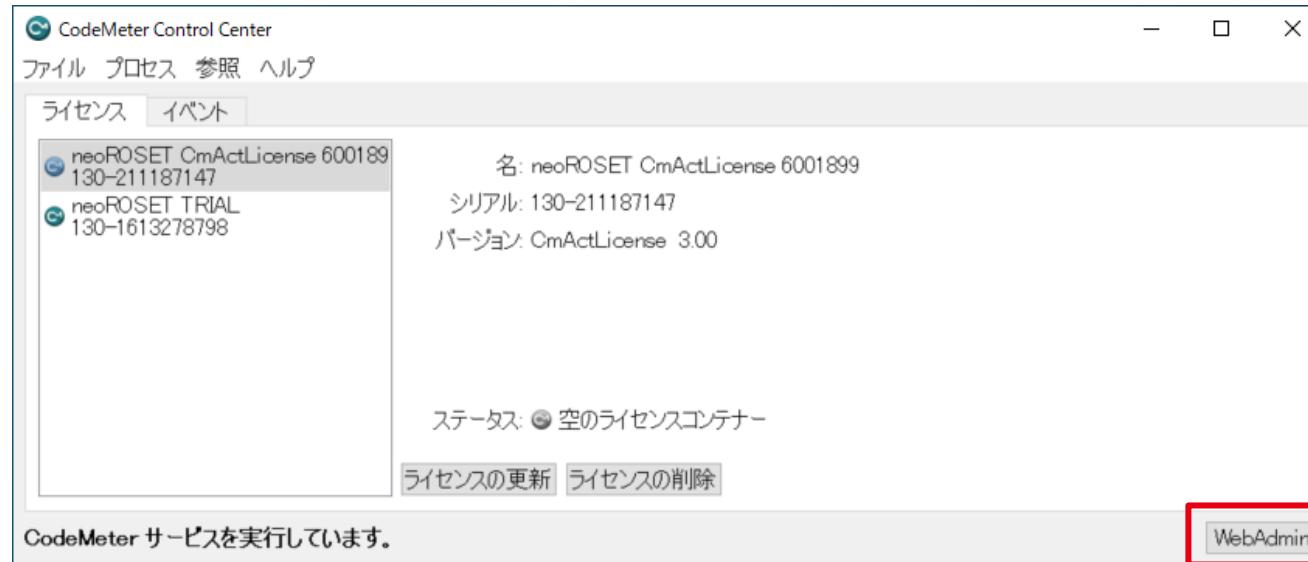


[Floating] Setting up neoROSET PC

- ③ Click “Configuration”.

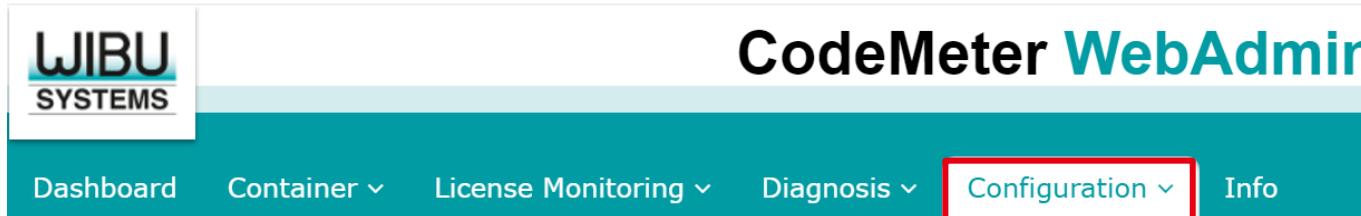


- ④ From the Server Search List, click “add new Server”.

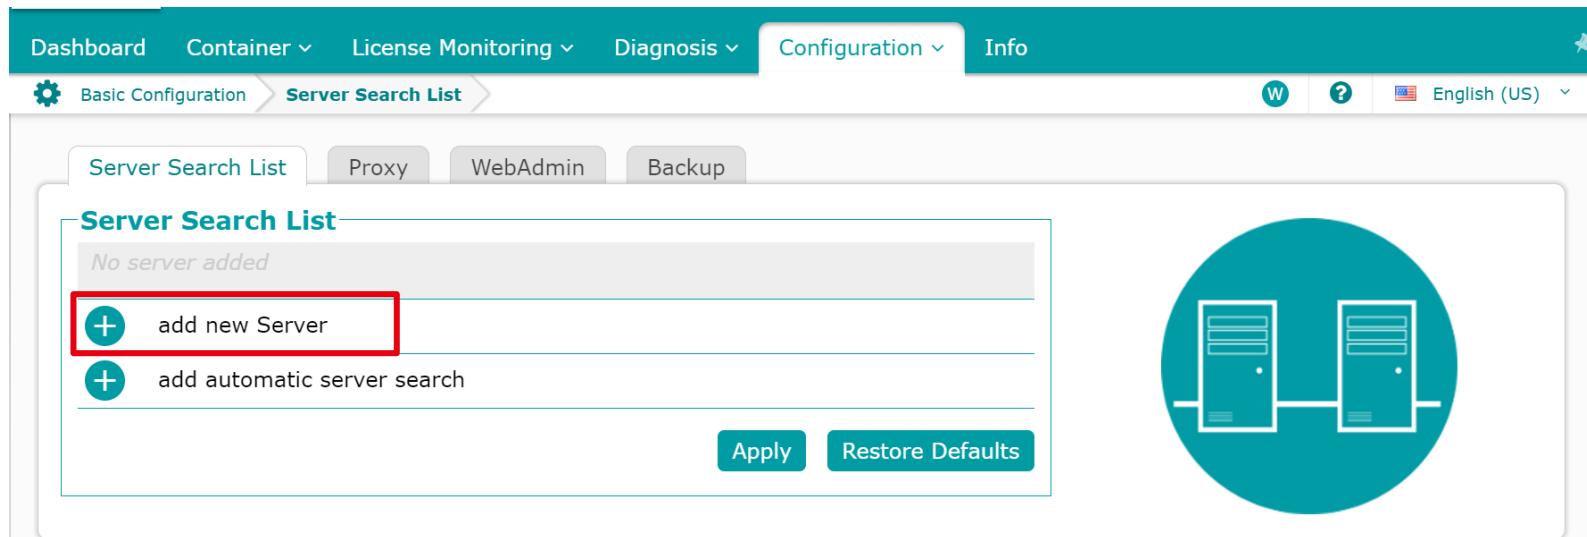

[Floating] Setting up neoROSET PC

- ⑤ Enter the IP address of the device managing the license and click “Add”.

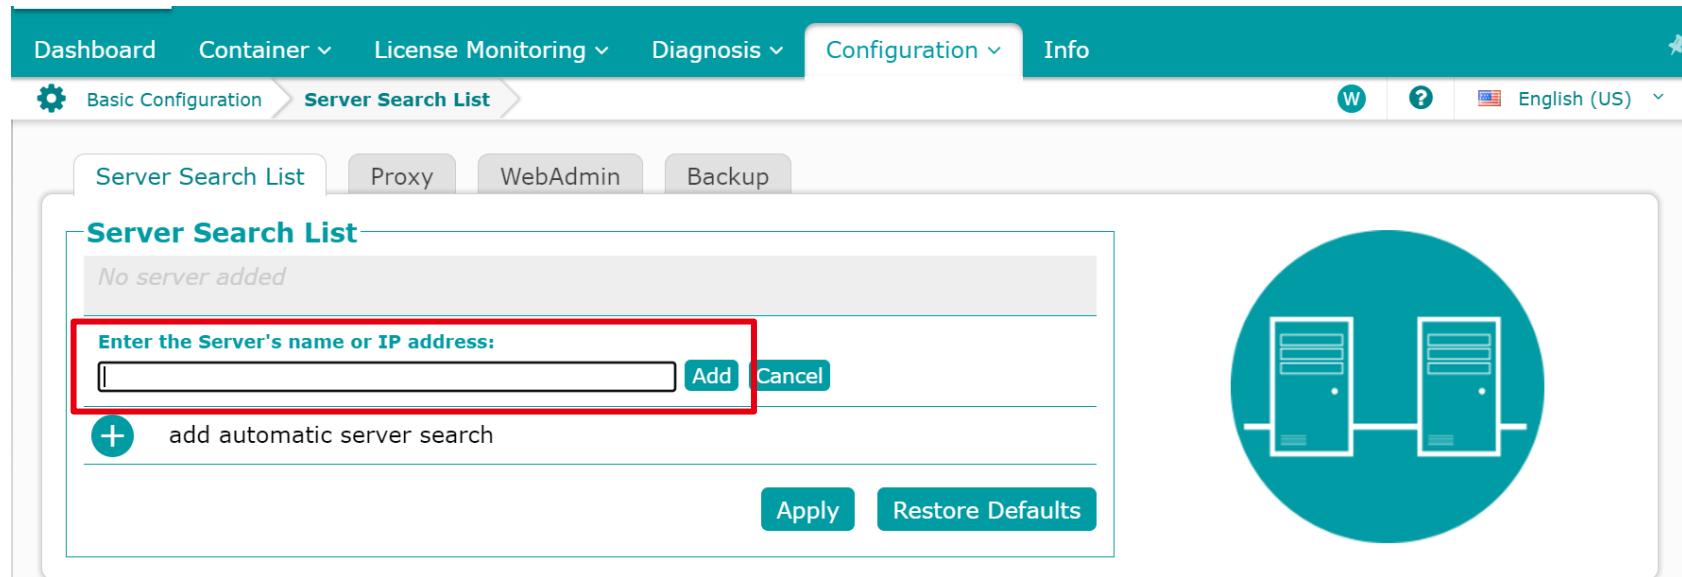


The screenshot shows the neoROSET PC configuration interface with the following details:

- Header:** Dashboard, Container, License Monitoring, Diagnosis, Configuration, Info.
- Breadcrumbs:** Basic Configuration > Server Search List.
- Buttons:** Server Search List, Proxy, WebAdmin, Backup.
- Section:** Server Search List. Sub-section: No server added.
- Input Field:** Enter the Server's name or IP address: (highlighted with a red box).
- Buttons:** Add (highlighted with a red box), Cancel.
- Link:** + add automatic server search.
- Buttons:** Apply, Restore Defaults.
- Icon:** A circular icon containing two server rack icons.

【Floating】 Setting up neoROSET PC

- ⑥ Click “Apply”.

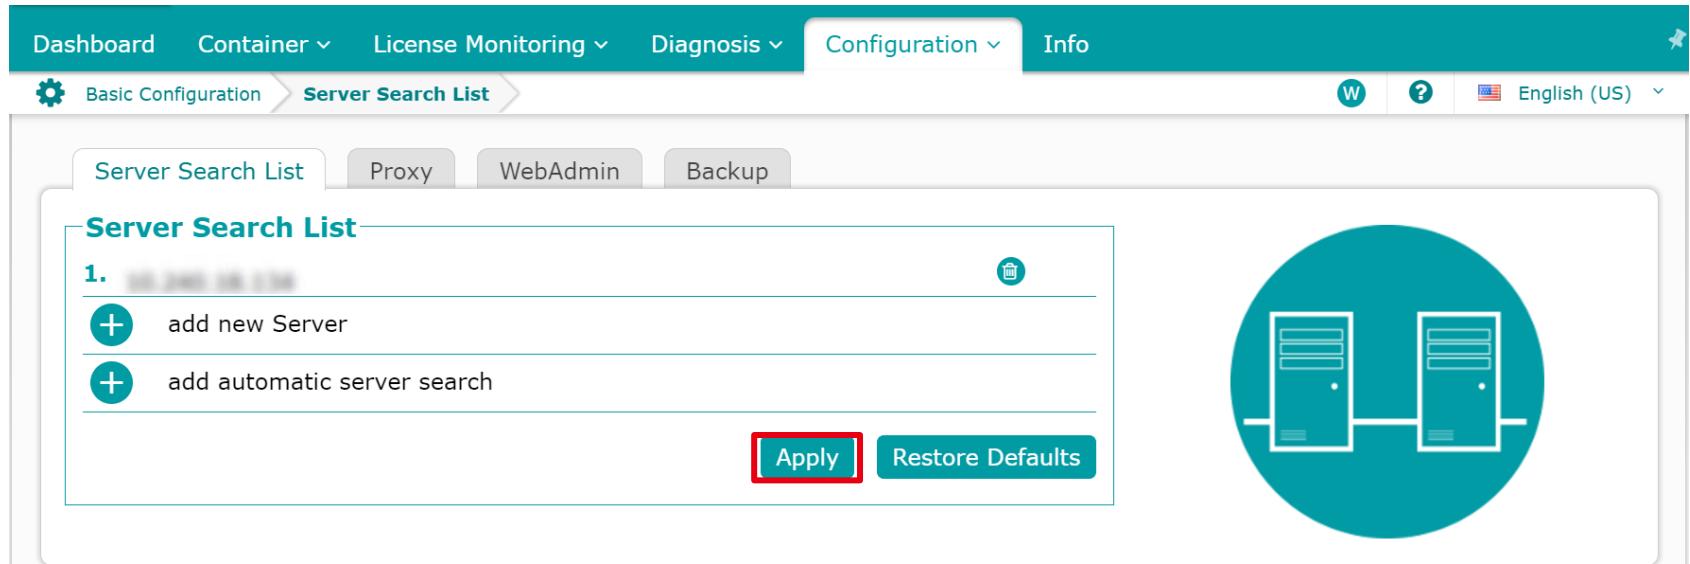

The screenshot shows a web-based configuration interface for a neoROSET PC. The top navigation bar includes links for Dashboard, Container, License Monitoring, Diagnosis, Configuration (which is currently selected), and Info. Below the navigation is a breadcrumb trail: Basic Configuration > Server Search List. The main content area has tabs for Server Search List, Proxy, WebAdmin, and Backup. The Server Search List tab is active, displaying a list with two items: 'add new Server' and 'add automatic server search'. At the bottom of this list are two buttons: 'Apply' (which is highlighted with a red box) and 'Restore Defaults'. To the right of the list is a large teal circular icon containing two server rack icons, representing a network or server cluster.

- ⑦ neoROSET will be available.

世界の人々の豊かな生活と地球環境の未来に貢献する
“Global Kawasaki”