


Astorino

24V IO Module Operation Manual



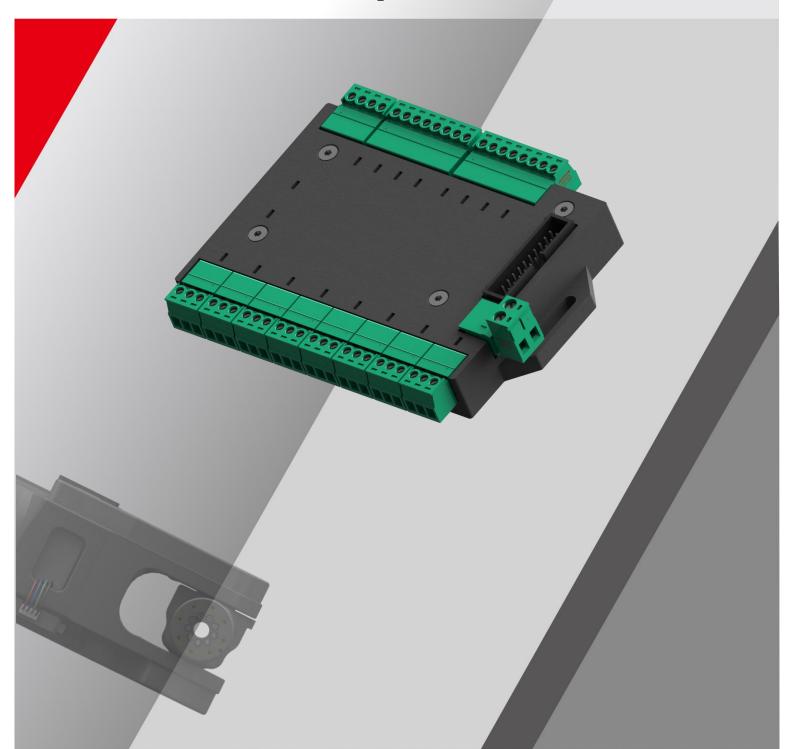

Preface

This manual describes the handling of the 6-axis robot "astorino" 24V IO Module option.

The ASTORINO is a learning robot specially developed for educational institutions. Pupils and students can use the ASTORINO to learn robot-assisted automation of industrial processes in practice.



- 1. The "astorino" software included with the ASTORINO is licensed for use with this robot only and may not be used, copied or distributed in any other environment.
- 2. Kawasaki shall not be liable for any accidents, damages, and/or problems caused by improper use of the ASTORINO robot.
- 3. Kawasaki reserves the right to change, revise, or update this manual without prior notice.
- 4. This manual may not be reprinted or copied in whole or in part without prior written permission from Kawasaki.
- 5. Keep this manual in a safe place and within easy reach so that it can be used at any time. If the manual is lost or seriously damaged, contact Kawasaki.

Copyright © 2024 by KAWASAKI Robotics GmbH.

All rights reserved.

Symbols

Items that require special attention in this manual are marked with the following symbols.

Ensure proper operation of the robot and prevent injury or property damage by following the safety instructions in the boxes with these symbols.

M WARNING

Failure to observe the specified contents could possibly result in injury or, in the worst case, death.

— [ATTENTION] —

Identifies precautions regarding robot specifications, handling, teaching, operation, and maintenance.

WARNING

- 1. The accuracy and effectiveness of the diagrams, procedures and explanations in this manual cannot be confirmed with absolute certainty. Should any unexplained problems occur, contact Kawasaki Robotics GmbH at the above address.
- 2. To ensure that all work is performed safely, read and understand this manual. In addition, refer to all applicable laws, regulations, and related materials, as well as the safety statements described in each chapter. Prepare appropriate safety measures and procedures for actual work.



Paraphrases

The following formatting rules are used in this manual:

- For a particular keystroke, the respective key is enclosed in angle brackets, e.g. <F1> or <Enter>.
- For the button of a dialog box or the toolbar, the button name is enclosed in square brackets, e.g. [Ok] or [Reset].
- Selectable fields are marked with a square box □.
 If selected a check mark is shown inside the symbol ☑.



List of contents

Pre	efac	ce	I
Sy	mb	ols	1
Pa	rapl	hrases	2
		contents	
1	No	omenclature in this manual	4
2	٥١	verview of ASTORINO	4
3	Te	echnical specifications	5
4	24	4V IO Module package contents	6
5	Di	mensions	7
6	Ge	eneral information	8
7	LE	ED indicators	9
8	Co	onnection to the robot	10
8	3.1	Connecting inputs	10
8	3.2	Connecting outputs	11
9	Co	ontrolling IO module	11
10		Manufacturer information	



1 Nomenclature in this manual

The author of the manual tries to use generally valid terminology while achieving the greatest possible logical sense. Unfortunately, it must be noted that the terminology is reversed depending on the point of view when considering one and the same topic. Also it is to be stated that in the course of the computer and software history terminologies developed in different way. One will find therefore in a modern manual no terminologies, which always satisfy 100% each expert opinion.

2 Overview of ASTORINO

The ASTORINO is a 6-axis learning robot developed specifically for educational institutions such as schools and universities. The robot design is based to be 3D printed with PET-G filament. Damaged parts can be reproduced by the user using a compatible 3D printer.

Programming and control of the robot is done by the "astorino" software.

The latest software version and 3D files can be downloaded from the KA-WASAKI ROBOTICS FTP server:

https://ftp.kawasakirobot.de/Software/Astorino/


Just like Kawasaki's industrial Robots the ASTORINO is programmed using AS language. Providing transferable programming skills from the classroom to real industrial applications.

3 Technical specifications

Characteristics		Astorino 24V IO Module	
Maulina andinanaant	Temperature	0-40°C	
Working environment –	Humidity	35-80%	
Galvanic isolation		Yes	
Operating Voltage		24 V	
Max. current consumption		2400 mA	
Connection ribbon cable length		30 cm	
Size		123x91.5x26mm	
Number of inputs		8	
Number of outputs		8	
Input type		PNP	
Output type		PNP	
Weight		300 g	
Material		PET-G, PCB	
Colour		Black/Green	
	Inputs	15EDGK-3.81-03P	
Connector types	Outputs	15EDGK-3.81-08P	
Connector types —	Power inlet	2EDGK-5.08-02P	
	Power outlet	15EDGK-3.81-04P	



4 24V IO Module package contents

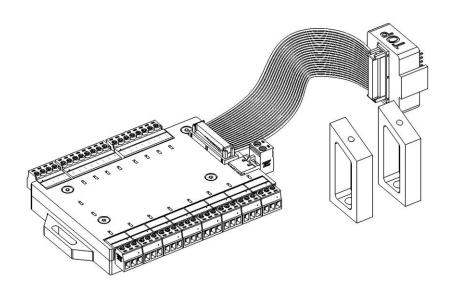


IO Module, ribbon cable, IO adapter, stand




24V power supply



5 Dimensions

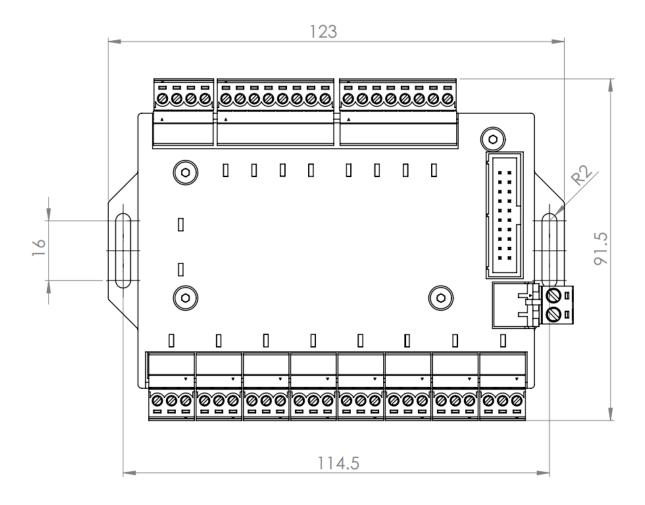


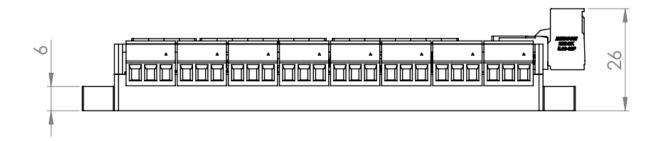




6 General information

The 24V I/O module is available as an option and is sold independently of the astorino robot or the astorino robot Kit. Both inputs and outputs work in PNP mode.

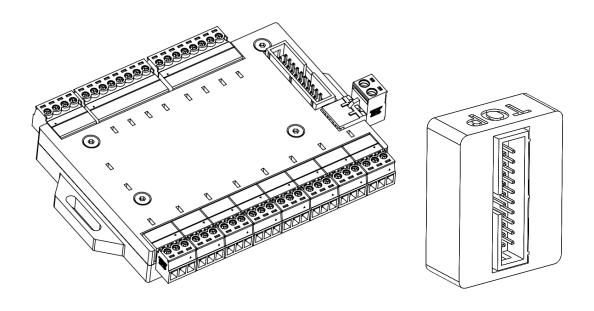


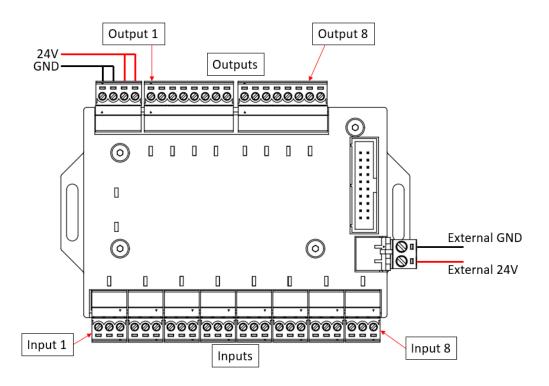

A total of 8 24V inputs and 8 24V outputs can be connected. Each output provides 300mA current (approx. 7.2W output power).



7 LED indicators

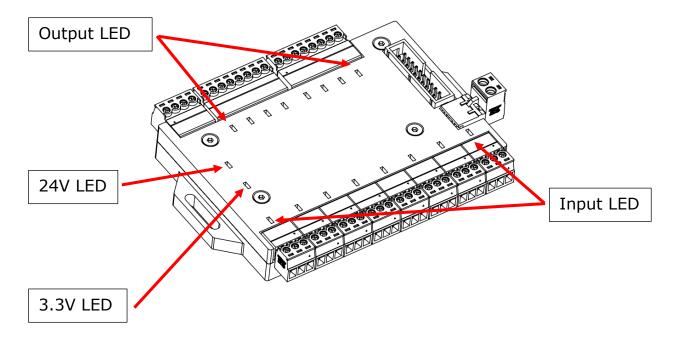


- 24V LED is on when 24V is delivered to the module,
- 3.3V LED is on when robot is connected to the module and is turned on,
- Output LED is on when output signal is HIGH,
- Input LED is on when input signal is HIGH.




8 Connection to the robot

The module is connected via the supplied 30cm ribbon cable.

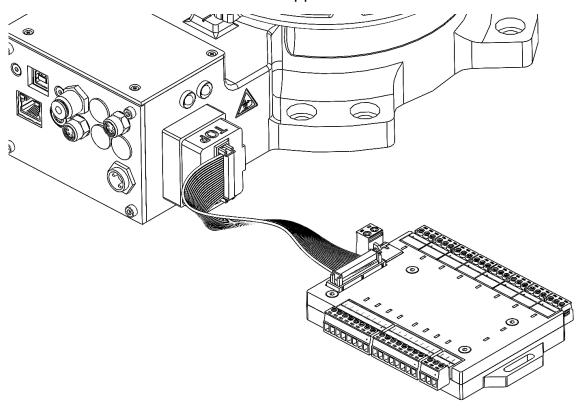


8.1 Connecting inputs

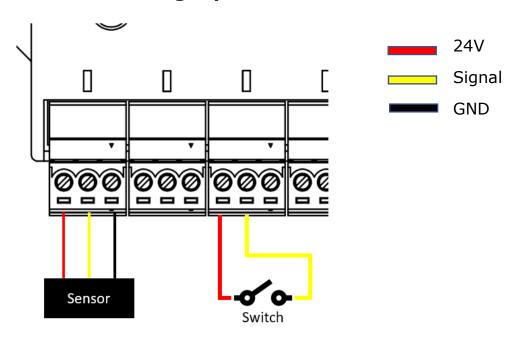





8.2 Connecting outputs

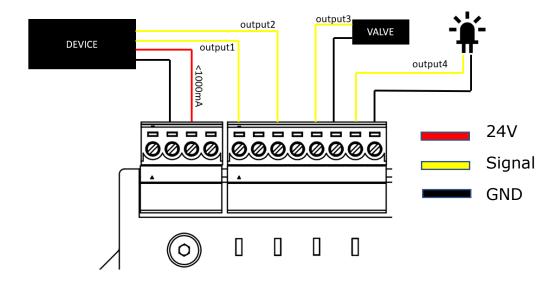


9 Controlling IO module

To control the IO module use astorino software or Teach Pendant to turn ON or OFF OUTPUTS, or use SIGNAL command in your program.

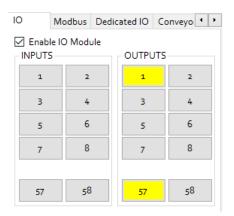

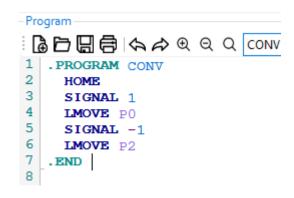

To read inputs use astorino software or Teach Pendant to view INPUT or use SIG/SWAIT command in your program.

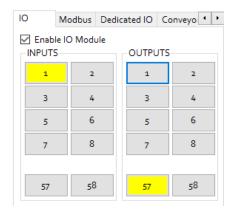

```
. PROGRAM CUBES
     HOME
     PULSE 1.2
     SWAIT 1001
 5
     LAPPRO PO,50
     SPEED 20 MM/S
     LMOVE PO
 8
     LDEPART 100
     PULSE 1,2
10
     IF SIG(1001) == TRUE THEN
11
12
      PRINT "THERE IS A CUBE"
     ELSE
       PRINT "CUBE NOT FOUND"
14
1.5
   .END
16
```

10 Manufacturer information

For further questions, contact Kawasaki Robotics support.

Contact:

Kawasaki Robotics GmbH tech-support@kawasakirobot.de +49 (0) 2131 - 3426 - 1310

Kawasaki Robot 24V IO Module Operation Manual

2024-01: 1st Edition

Publication: KAWASAKI Robotics GmbH

Copyright © 2024 by KAWASAKI Robotics GmbH. All rights reserved.